



HE693FLT050

The HE693FLT050 is a fault access display unit that is capable of monitoring and clearing all PLC CPU and I/O faults. It is also possible to change the state of the PLC between Run I/O Enable, Stop I/O Disable and Stop I/O Enable. Below is a description of the FLT050 keypad.

- Fault :** Toggles between PLC and I/O faults.
- Mode :** Toggles between fault code, description and time.
- Clear I/O :** Clear I/O faults.
- Clear PLC :** Clear PLC faults.
- Run :** Toggle between Run I/O Enable, Stop I/O Disable and Stop I/O Enable.
- Enter :** Accept changes.

If you have any more questions please contact Technical Support at (317) 916-4274 or email us at www.heapg.com.

7 May 2002

MAN0057-01

