

NRAG7.E180220 - Programmable Controllers for Use in Hazardous Locations Certified for Canada

Programmable Controllers for Use in Hazardous Locations Certified for Canada

HORNER APG L L C

59 S STATE AVE

INDIANAPOLIS, IN 46201-3876 United States

E180220

Class I, Division 2, Groups A, B, C and D, adapters Model(s) HE693SNP232

Class I, Division 2, Groups A, B, C and D, AF300E and variable frequency driver interfaces Model(s) HE300IBS100

Class I, Division 2, Groups A, B, C and D, analog input modules Model(s) HE670ADC810, HE670ADC810-01, HE670ADC810-02, HE670ADC810-05, HE670ADC810-06, HE670ADC810-08, HE670ADC810-09, HE670ADC810-12, HE670ADC810-13, HE670ADC810-14, HE670ADC810-15, HE670ADC810-18, HE670ADC810-19, HE670ADC810-20, HE670ADC810-24, HE670ADC810-40 thru HE670ADC810-49, IC670ADC810, IC670ADC810-01, IC670ADC810-02, IC670ADC810-05, IC670ADC810-06, IC670ADC810-08, IC670ADC810-09, IC670ADC810-12, IC670ADC810-13, IC670ADC810-14, IC670ADC810-15, IC670ADC810-18, IC670ADC810-19, IC670ADC810-20, IC670ADC810-24, IC670ADC810-40 thru IC670ADC810-49

Class I, Division 2, Groups A, B, C and D, back pack modules Model(s) HE-BP41, HE-BP43

Class I, Division 2, Groups A, B, C and D, Class II, Division 2, Groups F and G, Class III, Programmable Controllers "XL Plus Operator Control Station" Model(s) HE-XP7Ex XL Plus Operator Control Stations Series HE-XP followed by 7, followed by E, followed by x where x can be 0, 2, 3, 4, 5, or 6.

Class I, Division 2, Groups A, B, C and D, Class II, Division 2, Groups F and G, Class III, X10 Operator Control Stations Series "X10 Series" Model(s) HE-X10A Model HE-X10A , may be followed by two or three additional alphanumeric characters.

Class I, Division 2, Groups A, B, C and D, Class II, Division 2, Groups F and G, Class III, X10 Operator Control Stations Series "X10 Series" Model(s) HE-X10R Model HE-X10R , may be followed by two or three additional alphanumeric characters.

Class I, Division 2, Groups A, B, C and D, Class II, Division 2, Groups F and G, Class III, X2 Operator Control Station Series Model(s) HE-X2A may be followed by two or three additional alphanumeric characters.

Class I, Division 2, Groups A, B, C and D, Class II, Division 2, Groups F and G, Class III, X2 Operator Control Station Series Model(s) HE-X2R may be followed by two or three additional alphanumeric characters.

Class I, Division 2, Groups A, B, C and D, Class II, Division 2, Groups F and G, Class III, X4 Operator Control Stations Series Model(s) HE-X4A may be followed by two or three additional alphanumeric characters.

Class I, Division 2, Groups A, B, C and D, Class II, Division 2, Groups F and G, Class III, X4 Operator Control Stations Series Model(s) HE-X4R may be followed by two or three additional alphanumeric characters.

Class I, Division 2, Groups A, B, C and D, Class II, Division 2, Groups F and G, Class III, X4 Operator Control Stations Series Model(s) HE-X7A may be followed by two or three additional alphanumeric characters.

Class I, Division 2, Groups A, B, C and D, Class II, Division 2, Groups F and G, Class III, X4 Operator Control Stations Series Model(s) HE-X7R may be followed by two or three additional alphanumeric characters.

Class I, Division 2, Groups A, B, C and D, Class II, Division 2, Groups F and G, Class III, XL Plus Operator Control Station Series Model(s) HEXT followed by 75, followed by 0, 1, 2, 3, or 4, followed by C, followed by 0, 1, 3, 4, 5, 6, 7, 8, or 9, followed by 0, 2, 3, 4, 5, or 6, followed by any number between 00-49 or 500-999

Class I, Division 2, Groups A, B, C and D, co-processor modules Model(s) HE693RTM705, HE693RTM705-01, HE693RTM705-02, HE693RTM705-05, HE693RTM705-06, HE693RTM705-08, HE693RTM705-09, HE693RTM705-12, HE693RTM705-13, HE693RTM705-14, HE693RTM705-15, HE693RTM705-18, HE693RTM705-19, HE693RTM705-20, HE693RTM705-24, HE693RTM705-40 thru HE693RTM705-49

Class I, Division 2, Groups A, B, C and D, color touch "OCS Series" Model(s) HE500OCS451, HE500OCS551, HE500OCS651, HEQX451, HEQX551, HEQX651

Class I, Division 2, Groups A, B, C and D, communication adaptors Model(s) HE485ISO232, HE485ISO485

Class I, Division 2, Groups A, B, C and D, dual AC power monitors Model(s) HE200ACM530, HE200ACM600

Class I, Division 2, Groups A, B, C and D, ethernet modules Model(s) HE800ETN250/HEETN250, HE800ETN250/HEETN250-01, HE800ETN250/HEETN250-04, HE800ETN250/HEETN250-05, HE800ETN250/HEETN250-11

Class I, Division 2, Groups A, B, C and D, ethernet modules Model(s) HE800ETN250/HEETN250-15 thru HE800ETN250/HEETN250-49

Class I, Division 2, Groups A, B, C and D, EXL10 Canvas Operator Control Stations Series Model(s) CV-101D 3 alpha numeric digits or dash followed by CV-101D followed by 1 alpha numeric digit followed by 0, 2, 3, 4, 5, or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, EXL10 operator control stations Model(s) EXL10 Operator Control Stations Series 3 alpha numeric digits or dash followed by EXV followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5 or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, EXL10+ Operator Control Stations Series Model(s) XPV 3 alpha numeric digits or dash followed by XPV followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5, or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, EXL10+ Operator Control Stations Series (European Part Numbers) Model(s) HEXP50 HEXP50 followed by 2, 3, 4, or 5, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15, or 16, followed by dash 0 to 49 or 100-999.

Class I, Division 2, Groups A, B, C and D, EXL10e operator control stations Model(s) HEXT, followed by 5x (x can be 0 or 5,) followed by 0, 1, 2, 3 or 4, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15 or 16, followed by any letter A thru Z, followed by any letter A thru Z, followed by any number 00 thru 49 or 100-499.

Class I, Division 2, Groups A, B, C and D, EXL10e operator control stations Model(s) HEXT, followed by 5x, where x can be 0 or 5, followed by 0-4, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15 or 16, followed by any letter A to Z, followed by any letter A to Z, followed by any number 00 to 49 or 100-499 or 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, EXL10e Operator Control Stations Series Model(s) EXL10e Operator Control Stations Series HEXT followed by 2, 3, 4 or 5, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15, 16, followed by dash 0 to 49 or 100-999.

Class I, Division 2, Groups A, B, C and D, EXL6 Operator Control Stations Series Model(s) EXL6 Operator Control Stations Series 3 alpha numeric digits or dash followed by EXL followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5 or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, EXL6 Wide Canvas Operator Control Stations Series Model(s) CV-070C 3 alpha numeric digits or dash followed by CV-070C followed by 1 alphanumeric digit followed by 0, 2, 3, 4, 5, or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, EXL6+ Operator Control Stations Series Model(s) XPL 3 alpha numeric digits or dash followed by XPL followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5, or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, EXL6+ Operator Control Stations Series (European Part Numbers) Model(s) HEXP37 HEXP37 followed by 0, 1, 2, 3, 4, or 5, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15, or 16, followed by dash 0 to 49 or 100-999.

Class I, Division 2, Groups A, B, C and D, EXL6+ Wide Operator Control Stations Series Model(s) XPLW 3 alpha numeric digits or dash followed by XPLW followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5, or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, EXL6+ Wide Operator Control Stations Series (European Part Numbers) Model(s) HEXP38 HEXP38 followed by 0, 1, 2, 3, 4, or 5, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15, or 16, followed by dash 0 to 49 or 100-999.

Class I, Division 2, Groups A, B, C and D, EXL6e operator control stations Model(s) EXL6e Operator Control Stations Series HEXT37 followed by 0,1,2,3, or 4, followed by C, followed by 0-9, 00, 12, 13, 14, 15, 16, followed by any letter A to Z followed by any number 10 to 49 or 100-499 or 500-699 or 700-799

Class I, Division 2, Groups A, B, C and D, EXL6e operator control stations Model(s) EXL6e Operator Control Stations Series HEXT37 followed by 0,1,2,3, or 4, followed by C, followed by 0-9, 00, 12, 13, 14, 15, 16, followed by any letter A to Z followed by any number 10 to 49 or 100-499 or 500-699 or 700-799

Class I, Division 2, Groups A, B, C and D, EXL6e operator control stations Model(s) HE-EXL, followed by 100, 102, 103, 104, 105, 106, 1E0, 1E2, 1E3, 1E4, 1E5, 1E6, 1M0, 1M2, 1M3, 1M4, 1M5 or 1M6, followed by any letter A to Z, followed by any letter A to Z, followed any number 20 to 49, 100-499 or 700-799.

Class I, Division 2, Groups A, B, C and D, extended mini operator control stations Model(s) HE500OCX001, HE500OCX001-02, HE500OCX001-03, HE500OCX001-07, HE500OCX001-10 thru HE500OCX001-17, HE500OCX001-20 thru HE500OCX001-40, HE500OCX404, HE500OCX404-02, HE500OCX404-03, HE500OCX404-07, HE500OCX404-10 thru HE500OCX404-17, HE500OCX404-20 thru HE500OCX404-40, IC300OCX001, IC300OCX001-02, IC300OCX001-03, IC300OCX001-07, IC300OCX001-10 thru IC300OCX001-17, IC300OCX001-20 thru IC300OCX001-40, IC300OCX404, IC300OCX404-02, IC300OCX404-03, IC300OCX404-07, IC300OCX404-10 thru IC300OCX404-17, IC300OCX404-20 thru IC300OCX404-40

Class I, Division 2, Groups A, B, C and D, extended mini remote control station series Model(s) HE500RCX880, IC300RCX880

Class I, Division 2, Groups A, B, C and D, fiber optic bases Model(s) HE800FOX104, HE800FOX404

Class I, Division 2, Groups A, B, C and D, field control interbus-S bus interface units Model(s) HE670IBU100, HE670IBU100-01, HE670IBU100-02, HE670IBU100-05, HE670IBU100-06, HE670IBU100-08, HE670IBU100-09, HE670IBU100-12, HE670IBU100-13, HE670IBU100-14, HE670IBU100-15, HE670IBU100-18, HE670IBU100-19, HE670IBU100-20, HE670IBU100-24, HE670IBU100-40 thru HE670IBU100-49

Class I, Division 2, Groups A, B, C and D, input simulators Model(s) HE670ACC100, HE670ACC100-01, HE670ACC100-02, HE670ACC100-05, HE670ACC100-06, HE670ACC100-08, HE670ACC100-09, HE670ACC100-12, HE670ACC100-13, HE670ACC100-14, HE670ACC100-15, HE670ACC100-18, HE670ACC100-19, HE670ACC100-20, HE670ACC100-24, HE670ACC100-40 thru HE670ACC100-49

Class I, Division 2, Groups A, B, C and D, input/output modules Model(s) HE800ADC920, HE800ADC920-01, HE800ADC920-04, HE800ADC920-05, HE800ADC920-11, HE800ADC920-40 thru HE800ADC920-49, HE800DAC202, HE800DAC202-01, HE800DAC202-04, HE800DAC202-05, HE800DAC202-11, HE800DAC202-15 thru HE800DAC202-49, HE800DIQ516/616/711, HE800DIQ516/616/711-01, HE800DIQ516/616/711-04, HE800DIQ516/616/711-05, HE800DIQ516/616/711-11

Class I, Division 2, Groups A, B, C and D, input/output modules Model(s) HE800DIQ516/616/711-40 thru HE800DIQ516/616/711-49

Class I, Division 2, Groups A, B, C and D, input/output modules Model(s) HE800DIQ627, HE800DIQ627-01, HE800DIQ627-04, HE800DIQ627-05, HE800DIQ627-11, HE800DIQ627-15 thru HE800DIQ627-49, HE800DIQ712, HE800DIQ712-01, HE800DIQ712-04, HE800DIQ712-05, HE800DIQ712-11, HE800DIQ712-15 thru HE800DIQ712-49, HE800DIQ722, HE800DIQ722-01, HE800DIQ722-04, HE800DIQ722-05, HE800DIQ722-11, HE800DIQ722-15 thru HE800DIQ722-49, HE800DQM902, HE800DQM902-01, HE800DQM902-04, HE800DQM902-05, HE800DQM902-11, HE800DQM902-15 thru HE800DQM902-49, HE800HSC600/601, HE800HSC600/601-01, HE800HSC600/601-04, HE800HSC600/601-05, HE800HSC600/601-11, HE800HSC600/601-40 thru HE800HSC600/601-49, HE800MIX011/111/122/022, HE800MIX011/111/122/022-01, HE800MIX011/111/122/022-04, HE800MIX011/111/122/022-05, HE800MIX011/111/122/022-11

Class I, Division 2, Groups A, B, C and D, input/output modules Model(s) HE800MIX011/111/122/022-40 thru HE800MIX011/111/122/022-49

Class I, Division 2, Groups A, B, C and D, input/output modules Model(s) HE800MIX912, HE800MIX912-01, HE800MIX912-04, HE800MIX912-05, HE800MIX912-11, HE800MIX912-15 thru HE800MIX912-49, HE800STP100, HE800STP100-01, HE800STP100-04, HE800STP100-05, HE800STP100-11, HE800STP100-40 thru HE800STP100-49, HEADC920, HEADC920-01, HEADC920-04, HEADC920-05, HEADC920-11, HEADC920-40 thru HEADC920-49, HEDAC202, HEDAC202-01, HEDAC202-04, HEDAC202-05, HEDAC202-11, HEDAC202-15 thru HEDAC202-49, HEDIQ516/616/711, HEDIQ516/616/711-01, HEDIQ516/616/711-04, HEDIQ516/616/711-05, HEDIQ516/616/711-11, HEDIQ516/616/711-40 thru HEDIQ516/616/711-49, HEDIQ712, HEDIQ712-01, HEDIQ712-04, HEDIQ712-05, HEDIQ712-11, HEDIQ712-15 thru HEDIQ712-49, HEDIQ722, HEDIQ722-01, HEDIQ722-04, HEDIQ722-05, HEDIQ722-11, HEDIQ722-15 thru HEDIQ722-49, HEDQM902, HEDQM902-01, HEDQM902-04, HEDQM902-05, HEDQM902-11, HEDQM902-15 thru HEDQM902-49, HEMIX011/111/122/022, HEMIX011/111/122/022-01, HEMIX011/111/122/022-04, HEMIX011/111/122/022-05, HEMIX011/111/122/022-11

Class I, Division 2, Groups A, B, C and D, input/output modules Model(s) HEMIX011/111/122/022-40 thru HEMIX011/111/122/022-49

Class I, Division 2, Groups A, B, C and D, input/output modules Model(s) HEMIX912, HEMIX912-01, HEMIX912-04, HEMIX912-05, HEMIX912-11, HEMIX912-15 thru HEMIX912-49, HESTP100, HESTP100-01, HESTP100-04, HESTP100-05, HESTP100-11, HESTP100-40 thru HESTP100-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE693 or HE697, followed by ASC, DAC, DRV, RTD, RTU, SNP, STG, STP or THM, followed by three digits or NET or followed by three letters, may be followed by -01, -02, 05, -06, -08, -09, -12, -13, -14, -15, -18, -19, -20, -24 or -15 thru -49.

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800ADC010/HEADC010, HE800ADC010/HEADC010-01, HE800ADC010/HEADC010-04, HE800ADC010/HEADC010-05, HE800ADC010/HEADC010-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800ADC010/HEADC010-15 thru HE800ADC010/HEADC010-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800ADC020/HEADC020, HE800ADC020/HEADC020-01, HE800ADC020/HEADC020-04, HE800ADC020/HEADC020-05, HE800ADC020/HEADC020-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800ADC020/HEADC020-15 thru HE800ADC020/HEADC020-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800ADC110/HEADC110, HE800ADC110/HEADC110-01, HE800ADC110/HEADC110-04, HE800ADC110/HEADC110-05, HE800ADC110/HEADC110-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800ADC110/HEADC110-15 thru HE800ADC110/HEADC110-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800ADC120/HEADC120, HE800ADC120/HEADC120-01, HE800ADC120/HEADC120-04, HE800ADC120/HEADC120-05, HE800ADC120/HEADC120-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800ADC120/HEADC120-15 thru HE800ADC120/HEADC120-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800ADC920, HE800ADC920-01, HE800ADC920-04, HE800ADC920-05, HE800ADC920-11, HE800ADC920-15 thru HE800ADC920-49, HE800ASC100, HE800ASC100-01, HE800ASC100-04, HE800ASC100-05, HE800ASC100-11, HE800ASC100-15 thru HE800ASC100-49, HE800DAC001HEDAC001, HE800DAC001HEDAC001-01, HE800DAC001HEDAC001-04, HE800DAC001HEDAC001-05, HE800DAC001HEDAC001-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DAC001HEDAC001-15 thru HE800DAC001HEDAC001-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DAC002/HEDAC002, HE800DAC002/HEDAC002-01, HE800DAC002/HEDAC002-04, HE800DAC002/HEDAC002-05, HE800DAC002/HEDAC002-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DAC002/HEDAC002-15 thru HE800DAC002/HEDAC002-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DAC101/HEDAC101, HE800DAC101/HEDAC101-01, HE800DAC101/HEDAC101-04, HE800DAC101/HEDAC101-05, HE800DAC101/HEDAC101-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DAC101/HEDAC101-15 thru HE800DAC101/HEDAC101-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DAC102, HE800DAC102-01, HE800DAC102-04, HE800DAC102-05, HE800DAC102-11, HE800DAC102-15 thru HE800DAC102-49, HE800DIM210/HEDIM210, HE800DIM210/HEDIM210-01, HE800DIM210/HEDIM210-04, HE800DIM210/HEDIM210-05, HE800DIM210/HEDIM210-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIM210/HEDIM210-15 thru HE800DIM210/HEDIM210-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIM310, HE800DIM310-01, HE800DIM310-04, HE800DIM310-05, HE800DIM310-11, HE800DIM310-15 thru HE800DIM310-49, HE800DIM410, HE800DIM410-01, HE800DIM410-04, HE800DIM410-05, HE800DIM410-11, HE800DIM410-15 thru HE800DIM410-49, HE800DIQ511/HEDIQ511, HE800DIQ511/HEDIQ511-01, HE800DIQ511/HEDIQ511-04, HE800DIQ511/HEDIQ511-05, HE800DIQ511/HEDIQ511-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIQ511/HEDIQ511-15 thru HE800DIQ511/HEDIQ511-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIQ512/HEDIQ512, HE800DIQ512/HEDIQ512-01, HE800DIQ512/HEDIQ512-04, HE800DIQ512/HEDIQ512-05, HE800DIQ512/HEDIQ512-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIQ512/HEDIQ512-15 thru HE800DIQ512/HEDIQ512-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIQ524/HEDIQ524, HE800DIQ524/HEDIQ524-01, HE800DIQ524/HEDIQ524-04, HE800DIQ524/HEDIQ524-05, HE800DIQ524/HEDIQ524-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIQ524/HEDIQ524-15 thru HE800DIQ524/HEDIQ524-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIQ611/HEDIQ611, HE800DIQ611/HEDIQ611-01, HE800DIQ611/HEDIQ611-04, HE800DIQ611/HEDIQ611-05, HE800DIQ611/HEDIQ611-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIQ611/HEDIQ611-15 thru HE800DIQ611/HEDIQ611-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIQ612/HEDIQ612, HE800DIQ612/HEDIQ612-01, HE800DIQ612/HEDIQ612-04, HE800DIQ612/HEDIQ612-05, HE800DIQ612/HEDIQ612-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIQ612/HEDIQ612-15 thru HE800DIQ612/HEDIQ612-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIQ622, HE800DIQ622-01, HE800DIQ622-04, HE800DIQ622-05, HE800DIQ622-11, HE800DIQ622-15 thru HE800DIQ622-49, HE800DIQ624/HEDIQ624, HE800DIQ624/HEDIQ624-01, HE800DIQ624/HEDIQ624-04, HE800DIQ624/HEDIQ624-05, HE800DIQ624/HEDIQ624-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIQ624/HEDIQ624-15 thru HE800DIQ624/HEDIQ624-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DIQ716-04, HE800DIQ716-11, HE800DIQ716-15 thru HE800DIQ716-49, HE800DMX100, HE800DMX100-01, HE800DMX100-04, HE800DMX100-05, HE800DMX100-11, HE800DMX100-15 thru HE800DMX100-49, HE800DQM201, HE800DQM201-01, HE800DQM201-04, HE800DQM201-05, HE800DQM201-11, HE800DQM201-15 thru HE800DQM201-49, HE800DQM202/HEDQM202, HE800DQM202/HEDQM202-01, HE800DQM202/HEDQM202-04, HE800DQM202/HEDQM202-05, HE800DQM202/HEDQM202-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800DQM202/HEDQM202-15 thru HE800DQM202/HEDQM202-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800MIX901/HEMIX901, HE800MIX901/HEMIX901-01, HE800MIX901/HEMIX901-04, HE800MIX901/HEMIX901-05, HE800MIX901/HEMIX901-11, HE800MIX902/HEMIX902, HE800MIX902/HEMIX902-01, HE800MIX902/HEMIX902-04, HE800MIX902/HEMIX902-05, HE800MIX902/HEMIX902-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800MIX902/HEMIX902-15 thru HE800MIX902/HEMIX902-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800RTD000/HERTD000, HE800RTD000/HERTD000-01, HE800RTD000/HERTD000-04, HE800RTD000/HERTD000-05, HE800RTD000/HERTD000-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800RTD000/HERTD000-15 thru HE800RTD000/HERTD000-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800RTD100/HERTD100, HE800RTD100/HERTD100-01, HE800RTD100/HERTD100-04, HE800RTD100/HERTD100-05, HE800RTD100/HERTD100-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800RTD100/HERTD100-15 thru HE800RTD100/HERTD100-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800THM000/HETHM000, HE800THM000/HETHM000-01, HE800THM000/HETHM000-04, HE800THM000/HETHM000-05, HE800THM000/HETHM000-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800THM000/HETHM000-15 thru HE800THM000/HETHM000-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800THM100/HETHM100, HE800THM100/HETHM100-01, HE800THM100/HETHM100-04, HE800THM100/HETHM100-05, HE800THM100/HETHM100-11

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HE800THM100/HETHM100-15 thru HE800THM100/HETHM100-49

Class I, Division 2, Groups A, B, C and D, input/output modules, SmartStack modules Model(s) HEDIM310, HEDIM310-01, HEDIM310-04, HEDIM310-05, HEDIM310-11, HEDIM310-15 thru HEDIM310-49, HEDIM410, HEDIM410-01, HEDIM410-04, HEDIM410-05, HEDIM410-11, HEDIM410-15 thru HEDIM410-49

Class I, Division 2, Groups A, B, C and D, interbus-S remote message units Model(s) HE190ISIBSRMU

Class I, Division 2, Groups A, B, C and D, interbus-S slave modules "90-30 Series" Model(s) HE693IBS100, HE693IBS100-01, HE693IBS100-02, HE693IBS100-05, HE693IBS100-06, HE693IBS100-08, HE693IBS100-09, HE693IBS100-12, HE693IBS100-13, HE693IBS100-14, HE693IBS100-15, HE693IBS100-18, HE693IBS100-19, HE693IBS100-20, HE693IBS100-24, HE693IBS100-40 thru HE693IBS100-49

Class I, Division 2, Groups A, B, C and D, mini OCS operator control station and remote control stations Model(s) HE500OCS, IC300OCS, HE500RCS or IC300RCS, may be followed by 052, 053, 082 or 083, may be followed by -02, -03, -07, -10 thru -17, or -20 thru -49.

Class I, Division 2, Groups A, B, C and D, mixed analog input modules Model(s) HE693MIX800, HE693MIX800-01, HE693MIX800-02, HE693MIX800-05, HE693MIX800-06, HE693MIX800-08, HE693MIX800-09, HE693MIX800-12, HE693MIX800-13, HE693MIX800-14, HE693MIX800-15, HE693MIX800-18, HE693MIX800-19, HE693MIX800-20, HE693MIX800-24, HE693MIX800-40 thru HE693MIX800-49

Class I, Division 2, Groups A, B, C and D, open-type programmable controllers Model(s) HE559DIM610*, HE559DIM710*, HE559DIQ816*, HE559DQM602*, HE559DQM606*, HE559DQM706*, HE599ADC170*, HE599ADC270*, HE599CNX100*, HE599COS100*, HE599DAC101*, HE599DAC106*, HE599DIM510*, HE599DIM610*, HE599DIM710*, HE599DIQ512*, HE599DNX100*, HE599DQM502*, HE599DQM506*, HE599DQM602*, HE599DQM606*, HE599DQM706*, HE599ETX200*, HE599ETX300*, HE599LDX100*, HE599MIX116*, HE599RTD100*, HE599THM100*

Class I, Division 2, Groups A, B, C and D, operator control station and terminal interface modules Model(s) HE500, followed by TIU, followed by 050, 051, 100, 110.

Class I, Division 2, Groups A, B, C and D, operator control stations "LX Series" Model(s) HE500LX280, HE500LX300, IC300LX280, IC300LX300

Class I, Division 2, Groups A, B, C and D, operator control stations "NX Series OCS" Model(s) HE-NX, followed by 220, 221, 222, 250, 251 or 252, followed by letters A to Z, followed by letters A to Z followed by a dash, followed by any number 20-49.

Class I, Division 2, Groups A, B, C and D, operator control stations "NX Series OCS" Model(s) HENX, followed by 22, 25 or 26, followed by 0 or 1, followed by C, T or N, followed by 0, 1, 2 or 3, followed by 00, 01, 02, 03 or 05, followed by A-Z, followed by A-Z, followed by a dash, followed by 00-03, 10-17 or 20-49.

Class I, Division 2, Groups A, B, C and D, operator control stations "ZX Series" Model(s) HE-ZX1152, HE-ZX452, HE-ZX752, HM-MZX1152, HM-MZX452, HM-MZX752

Class I, Division 2, Groups A, B, C and D, operator interface units Model(s) HE693, followed by GIU or TCR, followed by three digits, may be followed by -01, -02, -03, -04, -10, -24, -28 or -50 thru -98.

Class I, Division 2, Groups A, B, C and D, operator interface units Model(s) HE700GEN200

Class I, Division 2, Groups A, B, C and D, Programmable Controller Model(s) HE-RCC6512, HE579HSC600

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE-CX, followed by 116, 251, 101 or 250, followed by any letter A-Z, followed by any letter A-Z, followed by any number 20-49.

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE-QX751, HE500OCS031, HE500OCS031-02, HE500OCS031-03, HE500OCS031-07, HE500OCS031-10 thru HE500OCS031-17, HE500OCS031-20 thru HE500OCS031-49, HE500OCS032, HE500OCS032-02, HE500OCS032-03, HE500OCS032-07, HE500OCS032-10 thru HE500OCS032-17, HE500OCS032-20 thru HE500OCS032-49, HE500OCS035, HE500OCS035-02, HE500OCS035-03, HE500OCS035-07, HE500OCS035-10 thru HE500OCS035-17, HE500OCS035-20 thru HE500OCS035-49, HE500OCS036/IC300OCS036, HE500OCS036/IC300OCS036-02, HE500OCS036/IC300OCS036-03, HE500OCS036/IC300OCS036-07

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS036/IC300OCS036-10 thru HE500OCS036/IC300OCS036-17

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS036/IC300OCS036-20 thru HE500OCS036/IC300OCS036-49

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS037/IC300OCS037, HE500OCS037/IC300OCS037-02, HE500OCS037/IC300OCS037-03, HE500OCS037/IC300OCS037-07

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS037/IC300OCS037-10 thru HE500OCS037/IC300OCS037-17

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS037/IC300OCS037-20 thru HE500OCS037/IC300OCS037-49

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS041/IC300OCS041, HE500OCS041/IC300OCS041-02, HE500OCS041/IC300OCS041-03, HE500OCS041/IC300OCS041-07

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS041/IC300OCS041-10 thru HE500OCS041/IC300OCS041-17

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS041/IC300OCS041-20 thru HE500OCS041/IC300OCS041-49

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS042/IC300OCS042, HE500OCS042/IC300OCS042-02, HE500OCS042/IC300OCS042-03, HE500OCS042/IC300OCS042-07

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS042/IC300OCS042-10 thru HE500OCS042/IC300OCS042-17

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS042/IC300OCS042-20 thru HE500OCS042/IC300OCS042-49

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS052/IC300OCS052, HE500OCS052/IC300OCS052-02, HE500OCS052/IC300OCS052-03, HE500OCS052/IC300OCS052-07

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS052/IC300OCS052-10 thru HE500OCS052/IC300OCS052-17

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS052/IC300OCS052-20 thru HE500OCS052/IC300OCS052-49

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS053/IC300OCS053, HE500OCS053/IC300OCS053-02, HE500OCS053/IC300OCS053-03, HE500OCS053/IC300OCS053-07

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS053/IC300OCS053-10 thru HE500OCS053/IC300OCS053-17

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS053/IC300OCS053-20 thru HE500OCS053/IC300OCS053-49

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS061, HE500OCS061-02, HE500OCS061-03, HE500OCS061-07, HE500OCS061-10 thru HE500OCS061-17, HE500OCS061-20 thru HE500OCS061-49, HE500OCS062, HE500OCS062-02, HE500OCS062-03, HE500OCS062-07, HE500OCS062-10 thru HE500OCS062-17, HE500OCS062-20 thru HE500OCS062-49, HE500OCS065, HE500OCS065-02, HE500OCS065-03, HE500OCS065-07, HE500OCS065-10 thru HE500OCS065-17, HE500OCS065-20 thru HE500OCS065-49, HE500OCS066/IC300OCS066, HE500OCS066/IC300OCS066-02, HE500OCS066/IC300OCS066-03, HE500OCS066/IC300OCS066-07

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS066/IC300OCS066-10 thru HE500OCS066/IC300OCS066-17

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS066/IC300OCS066-20 thru HE500OCS066/IC300OCS066-49

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS067/IC300OCS067, HE500OCS067/IC300OCS067-02, HE500OCS067/IC300OCS067-03, HE500OCS067/IC300OCS067-07

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS067/IC300OCS067-10 thru HE500OCS067/IC300OCS067-17

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS067/IC300OCS067-20 thru HE500OCS067/IC300OCS067-49

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS071/IC300OCS071, HE500OCS071/IC300OCS071-02, HE500OCS071/IC300OCS071-03, HE500OCS071/IC300OCS071-07

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS071/IC300OCS071-10 thru HE500OCS071/IC300OCS071-17

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS071/IC300OCS071-20 thru HE500OCS071/IC300OCS071-49

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS072/IC300OCS072, HE500OCS072/IC300OCS072-02, HE500OCS072/IC300OCS072-03, HE500OCS072/IC300OCS072-07

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS072/IC300OCS072-10 thru HE500OCS072/IC300OCS072-17

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS072/IC300OCS072-20 thru HE500OCS072/IC300OCS072-49

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS082/IC300OCS082, HE500OCS082/IC300OCS082-02, HE500OCS082/IC300OCS082-03, HE500OCS082/IC300OCS082-07

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS082/IC300OCS082-10 thru HE500OCS082/IC300OCS082-17

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS082/IC300OCS082-20 thru HE500OCS082/IC300OCS082-49

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS083/IC300OCS083, HE500OCS083/IC300OCS083-02, HE500OCS083/IC300OCS083-03, HE500OCS083/IC300OCS083-07

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS083/IC300OCS083-10 thru HE500OCS083/IC300OCS083-17

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS083/IC300OCS083-20 thru HE500OCS083/IC300OCS083-49

Class I, Division 2, Groups A, B, C and D, programmable logic controllers Model(s) HE500OCS100, HE500OCS100-02, HE500OCS100-03, HE500OCS100-07, HE500OCS100-10 thru HE500OCS100-17, HE500OCS100-18, HE500OCS100-18-02, HE500OCS100-18-03, HE500OCS100-18-07, HE500OCS100-18-10 thru HE500OCS100-18-17, HE500OCS100-18-20 thru HE500OCS100-18-49, HE500OCS100-19, HE500OCS100-19-02, HE500OCS100-19-03, HE500OCS100-19-07, HE500OCS100-19-10 thru HE500OCS100-19-17, HE500OCS100-19-20 thru HE500OCS100-19-49, HE500OCS100-20 thru HE500OCS100-49, HE500OCS110-18, HE500OCS110-18-02, HE500OCS110-18-03, HE500OCS110-18-07, HE500OCS110-18-10 thru HE500OCS110-18-17, HE500OCS110-18-20 thru HE500OCS110-18-49, HE500OCS110-19, HE500OCS110-19-02, HE500OCS110-19-03, HE500OCS110-19-07, HE500OCS110-19-10 thru HE500OCS110-19-17, HE500OCS110-19-20 thru HE500OCS110-19-49, HE500OCS200, HE500OCS200-02, HE500OCS200-03, HE500OCS200-07, HE500OCS200-10 thru HE500OCS200-17, HE500OCS200-18, HE500OCS200-18-02, HE500OCS200-18-03, HE500OCS200-18-07, HE500OCS200-18-10 thru HE500OCS200-18-17, HE500OCS200-18-20 thru HE500OCS200-18-49, HE500OCS200-19, HE500OCS200-19-02, HE500OCS200-19-03, HE500OCS200-19-07, HE500OCS200-19-10 thru HE500OCS200-19-17, HE500OCS200-19-20 thru HE500OCS200-19-49, HE500OCS200-20 thru HE500OCS200-49, HE500OCS210-18, HE500OCS210-18-02, HE500OCS210-18-03, HE500OCS210-18-07, HE500OCS210-18-10 thru HE500OCS210-18-17, HE500OCS210-18-20 thru HE500OCS210-18-49, HE500OCS210-19, HE500OCS210-19-02, HE500OCS210-19-03, HE500OCS210-19-07, HE500OCS210-19-10 thru HE500OCS210-19-17, HE500OCS210-19-20 thru HE500OCS210-19-49, HE569DQM204, HE569DQM205, HE569DQM209, HE579ACM300, HE579ACM301, HE579ACM302, HE579ADC570, HE579ADC970, HE579DAC107, HE579DAC207, HE579DIQ880, HE579DIQ881, HE579MIX102, HE579MIX105, HE579MIX577, HE579MIX977, HE579RTD100, HE579RTD200, HE579THM100, HE579THM200

Class I, Division 2, Groups A, B, C and D, QX operator control stations Model(s) HE-QX351, followed by any letter A to Z, followed by any letter A to Z, followed by any number 20 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, QX operator control stations Model(s) HE-QX501, followed by any letter A to Z, followed by any letter A-Z, followed by any number 00 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, QX operator control stations Model(s) HEQX, followed by 35, followed by 0, 1, 2, 3 or 4 followed by C, followed by 0, 1, 2, 3, 4 or 5, followed by 03, followed by any letter A to Z, followed by any letter A to Z, followed by any number 00 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, QX operator control stations Model(s) QX Operator Control stations Series HE-QX351 followed by any number 20 to 49 or 100-499 or 500-699 or 700-799

Class I, Division 2, Groups A, B, C and D, QX operator control stations Model(s) QX Operator Control stations Series HEQX followed by 35, followed by 0, 1, 2, 3, 4 followed by C followed by 0, 1, 2, 3, 4 or 5, followed by 03, followed by any number 00 to 49 or 100-499 or 500-699 or 700-799

Class I, Division 2, Groups A, B, C and D, QX Operator Control Stations Series Model(s) QX Operator Control Stations Series HE-QX501 followed by any number 00 to 49 or 100-499 or 500-699 or 700-799

Class I, Division 2, Groups A, B, C and D, remote control station series Model(s) HE500RCS036, HE500RCS036-02, HE500RCS036-03, HE500RCS036-07, HE500RCS036-10 thru HE500RCS036-17, HE500RCS036-20 thru HE500RCS036-49, HE500RCS037, HE500RCS037-02, HE500RCS037-03, HE500RCS037-07, HE500RCS037-10 thru HE500RCS037-17, HE500RCS037-20 thru HE500RCS037-49, HE500RCS041, HE500RCS041-02, HE500RCS041-03, HE500RCS041-07, HE500RCS041-10 thru HE500RCS041-17, HE500RCS041-20 thru HE500RCS041-49, HE500RCS042, HE500RCS042-02, HE500RCS042-03, HE500RCS042-07, HE500RCS042-10 thru HE500RCS042-17, HE500RCS042-20 thru HE500RCS042-49, HE500RCS066, HE500RCS066-02, HE500RCS066-03, HE500RCS066-07, HE500RCS066-10 thru HE500RCS066-17, HE500RCS066-20 thru HE500RCS066-49, HE500RCS067, HE500RCS067-02, HE500RCS067-03, HE500RCS067-07, HE500RCS067-10 thru HE500RCS067-17, HE500RCS067-20 thru HE500RCS067-49, HE500RCS071, HE500RCS071-02, HE500RCS071-03, HE500RCS071-07, HE500RCS071-10 thru HE500RCS071-17, HE500RCS071-20 thru HE500RCS071-49, HE500RCS072, HE500RCS072-02, HE500RCS072-03, HE500RCS072-07, HE500RCS072-10 thru HE500RCS072-17, HE500RCS072-20 thru HE500RCS072-49, HE500RCX001, HE500RCX001-02, HE500RCX001-03, HE500RCX001-07, HE500RCX001-10 thru HE500RCX001-17, HE500RCX001-20 thru HE500RCX001-40, HE500RCX404, HE500RCX404-02, HE500RCX404-03, HE500RCX404-07, HE500RCX404-10 thru HE500RCX404-17, HE500RCX404-20 thru HE500RCX404-40, IC300RCS036, IC300RCS036-02, IC300RCS036-03, IC300RCS036-07, IC300RCS036-10 thru IC300RCS036-17, IC300RCS036-20 thru IC300RCS036-49, IC300RCS037, IC300RCS037-02, IC300RCS037-03, IC300RCS037-07, IC300RCS037-10 thru IC300RCS037-17, IC300RCS037-20 thru IC300RCS037-49, IC300RCS041, IC300RCS041-02, IC300RCS041-03, IC300RCS041-07, IC300RCS041-10 thru IC300RCS041-17, IC300RCS041-20 thru IC300RCS041-49, IC300RCS042, IC300RCS042-02, IC300RCS042-03, IC300RCS042-07, IC300RCS042-10 thru IC300RCS042-17, IC300RCS042-20 thru IC300RCS042-49, IC300RCS066, IC300RCS066-02, IC300RCS066-03, IC300RCS066-07, IC300RCS066-10 thru IC300RCS066-17, IC300RCS066-20 thru IC300RCS066-49, IC300RCS067, IC300RCS067-02, IC300RCS067-03, IC300RCS067-07, IC300RCS067-10 thru IC300RCS067-17, IC300RCS067-20 thru IC300RCS067-49, IC300RCS071, IC300RCS071-02, IC300RCS071-03, IC300RCS071-07, IC300RCS071-10 thru IC300RCS071-17, IC300RCS071-20 thru IC300RCS071-49, IC300RCS072, IC300RCS072-02, IC300RCS072-03, IC300RCS072-07, IC300RCS072-10 thru IC300RCS072-17, IC300RCS072-20 thru IC300RCS072-49, IC300RCX001, IC300RCX001-02, IC300RCX001-03, IC300RCX001-07, IC300RCX001-10 thru IC300RCX001-17, IC300RCX001-20 thru IC300RCX001-40, IC300RCX404, IC300RCX404-02, IC300RCX404-03, IC300RCX404-07, IC300RCX404-10 thru IC300RCX404-17, IC300RCX404-20 thru IC300RCX404-40

Class I, Division 2, Groups A, B, C and D, smart cables Model(s) HE693SNP306

Class I, Division 2, Groups A, B, C and D, SmartStack I/O modules, open type Model(s) HE800ASC100/HEASC100, HE800ASC100/HEASC100-01, HE800ASC100/HEASC100-04, HE800ASC100/HEASC100-05, HE800ASC100/HEASC100-11

Class I, Division 2, Groups A, B, C and D, SmartStack I/O modules, open type Model(s) HE800ASC100/HEASC100-15 thru HE800ASC100/HEASC100-49

Class I, Division 2, Groups A, B, C and D, SmartStack I/O modules, open type Model(s) HE800DIQ716, HE800DIQ716-01, HE800DIQ716-04, HE800DIQ716-05, HE800DIQ716-11, HE800DMX100/HEDMX100, HE800DMX100/HEDMX100-01, HE800DMX100/HEDMX100-04, HE800DMX100/HEDMX100-05, HE800DMX100/HEDMX100-11

Class I, Division 2, Groups A, B, C and D, SmartStack I/O modules, open type Model(s) HE800DMX100/HEDMX100-15 thru HE800DMX100/HEDMX100-49

Class I, Division 2, Groups A, B, C and D, SmartStack I/O modules, open type Model(s) HE800MIX901/HEMIX901-01, HE800MIX901/HEMIX901-04, HE800MIX901/HEMIX901-05

Class I, Division 2, Groups A, B, C and D, SmartStack I/O modules, open type Model(s) HE800MIX901/HEMIX901-15 thru HE800MIX901/HEMIX901-49

Class I, Division 2, Groups A, B, C and D, SmartStack modules Model(s) HE800DQM306/HEDQM306, HE800DQM406/HEDQM406, HE800GCM911/HEGCM911

Class I, Division 2, Groups A, B, C and D, sourcing analog output modules Model(s) HE800DAC106, HEDAC106, IC300DAC106

Class I, Division 2, Groups A, B, C and D, terminal interface modules Model(s) HE500TIU100, HE500TIU100-005 thru HE500TIU100-055, HE500TIU100-150, HE500TIU100-152 thru HE500TIU100-350, HE500TIU150, HE500TIU150-005 thru HE500TIU150-055, HE500TIU150-150, HE500TIU150-152 thru HE500TIU150-350

Class I, Division 2, Groups A, B, C and D, text interface units Model(s) CS500TIU200, CS500TIU200-005 thru CS500TIU200-055, CS500TIU200-150, CS500TIU200-152 thru CS500TIU200-350, CS500TIU201, CS500TIU201-005 thru CS500TIU201-055, CS500TIU201-150, CS500TIU201-152 thru CS500TIU201-350, CS500TIU203, CS500TIU203-005 thru CS500TIU203-055, CS500TIU203-150, CS500TIU203-152 thru CS500TIU203-350, HE500CTIU200, HE500CTIU200-005 thru HE500CTIU200-055, HE500CTIU200-150, HE500CTIU200-152 thru HE500CTIU200-350, HE500CTIU201, HE500CTIU201-005 thru HE500CTIU201-055, HE500CTIU201-150, HE500CTIU201-152 thru HE500CTIU201-350, HE500CTIU203, HE500CTIU203-005 thru HE500CTIU203-055, HE500CTIU203-150, HE500CTIU203-152 thru HE500CTIU203-350, HE500TIU200, HE500TIU200-005 thru HE500TIU200-055, HE500TIU200-150, HE500TIU200-152 thru HE500TIU200-350, HE500TIU201, HE500TIU201-005 thru HE500TIU201-055, HE500TIU201-150, HE500TIU201-152 thru HE500TIU201-350, HE500TIU203, HE500TIU203-005 thru HE500TIU203-055, HE500TIU203-150, HE500TIU203-152 thru HE500TIU203-350

Class I, Division 2, Groups A, B, C and D, thermocouple input modules Model(s) HE800THM200/HETHM200

Class I, Division 2, Groups A, B, C and D, Thermocouple Module "Thermocouple Module" Model(s) HE693THM884-60

Class I, Division 2, Groups A, B, C and D, X5 Canvas Operator Control Station Series Model(s) CV-043C-01 HE- followed by CV-043C-01, followed by dash and any number between 100 and 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, X5 Operator Control Station Model(s) X5 Operator Control Station Series HE- followed by X, followed by 5, followed by any number between 100 and 999.

Class I, Division 2, Groups A, B, C and D, X5+ Operator Control Station Series Model(s) XP5 HE- followed by XP, followed by 5, followed by dash and any number between 100 and 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, XL10 operator control stations Model(s) XL10 Operator Control Stations Series 3 alpha numeric digits or dash followed by XV followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5 or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, XL10 operator control stations Model(s) XL10 Operator Control Stations Series HEX50 followed by 1, followed by C, followed by 0-9, followed by 00, 12, 13, 14 15, 16, followed by dash 0 to 49 or 100-999.

Class I, Division 2, Groups A, B, C and D, XL10E operator control stations Model(s) HE-XV or HM-MV, followed by 1E0, 1E2, 1E3, 1E4, 1E5 or 1E6, followed by any letter A to Z, followed by any number 20 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XL4 Canvas Operator Control Stations Series Model(s) CV-035C 3 alpha numeric digits or dash followed by CV-035C followed by 1 alpha numeric digit followed by 0, 2, 3, 4, 5, or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, XL4 operator control stations Model(s) HE-XC or HM-MC, followed by 100, 102, 103, 104, 105, 106, 1E0, 1E2, 1E3, 1E4, 1E5, 1E6, 1M0, 1M2, 1M3, 1M4, 1M5 or 1M6, followed by any letter A thru Z, followed by any letter A thru Z, followed by any number 20 thru 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XL4 operator control stations Model(s) HE-XC, followed by ME or WA, followed by 0, 2, 3, 4, 5 or 6, followed by any letter A thru Z, followed by any letter A thru Z, followed by any number 20 thru 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XL4 operator control stations Model(s) HEXT25, followed by 0, 1, 2, 3 or 4, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15 or 16, followed by any letter A to Z, followed by any letter A to Z, followed by any number 00 to 49, 100-499 or 500-699. or 700-799

Class I, Division 2, Groups A, B, C and D, XL4 operator control stations Model(s) XL4 Operator Control Stations Series 3 alpha numeric digits or dash followed by XC followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5 or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, XL4 operator control stations Model(s) XL4 Operator Control Stations Series HEXT25 followed by 0, 1, 2, 3, 4 or 5, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15, or 16, followed by dash 0 to 49 or 100-999.

Class I, Division 2, Groups A, B, C and D, XL4+ Operator Control Stations Series Model(s) XPC 3 alpha numeric digits or dash followed by XPC followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5, 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, XL4+ Operator Control Stations Series (European Part Number) Model(s) HEXP25 HEXP25 followed by 0, 1, 2, 3, 4, or 5, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15, or 16, followed by dash 0 to 49 or 100-999.

Class I, Division 2, Groups A, B, C and D, XL6 operator control stations Model(s) HE-XL or HM-ML, followed by 100, 102, 103, 104, 105, 106, 1E0, 1E2, 1E3, 1E4, 1E5, 1E6, 1M0, 1M2, 1M3, 1M4, 1M5 or 1M6, followed by any letter A to Z, followed by any letter A to Z, followed any number 20 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XL6 operator control stations Model(s) HE-XL, followed by ME or WA, followed by 0, 2, 3, 4, 5 or 6, followed by any letter A to Z, followed by any letter A to Z, followed by any number 20 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XL6 operator control stations Model(s) HEXT, followed by 28, followed by 0, 1, 2, 3 or 4, followed by C, followed by 0, 1, 2, 3, 4 or 5, followed by 00, 12, 13, 14, 15 or 16, followed by any letter A to Z, followed by any letter A to Z, followed by any number 00 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XL6 operator control stations Model(s) HEXT35, followed by 0, 1, 2, 3 or 4, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15 or 16, followed by any letter A to Z, followed by any letter A to Z, followed by any number 00 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XL6 Operator Control Stations Series Model(s) XL6 Operator Control Stations Series 3 alpha numeric digits or dash followed by XL followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5 or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, XL6 Operator Control Stations Series Model(s) XL6 Operator Control Stations Series HEXT35 followed by 0, 1, 2, 3, 4 or 5, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15, or 16, followed by dash 0 to 49 or 100-999.

Class I, Division 2, Groups A, B, C and D, XL7 Canvas Operator Control Stations Series Model(s) CV-070D 3 alpha numeric digits or dash followed by CV-070D followed by 1 alphanumeric digit followed by 0, 2, 3, 4, 5, or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, XL7 operator control stations Model(s) HE-XW or HM-MW, followed by 100, 102, 103, 104, 105, 106, 1E0, 1E2, 1E3, 1E4, 1E5 or 1E6, followed by any letter A to Z, followed by any letter A thru Z, followed by any number 20 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XL7 operator control stations Model(s) HEXT39, followed by 0,1,2,3 or 4, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15 or 16, followed by any letter A to Z, followed by any letter A to Z, followed by any number 00 to 49 or 100-499 or 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XL7 operator control stations Model(s) XL7 Operator Control Stations Series 3 alpha numeric digits or dash followed by XW followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5 or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, XL7 Operator Control Stations Series Model(s) XL7 Operator Control Stations Series HEXT39 followed by 0, 1, 2, 3, 4 or 5, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15, 16, followed by dash 0 to 49 or 100-999.

Class I, Division 2, Groups A, B, C and D, XL7+ Operator Control Stations Series Model(s) XPW 3 alpha numeric digits or dash followed by XPW followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5, or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, XL7+ Operator Control Stations Series (European Part Numbers) Model(s) HEXP39 HEXP39 followed by 0, 1, 2, 3, 4, or 5, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15, or 16, followed by dash 0 to 49 or 100-999.

Class I, Division 2, Groups A, B, C and D, XLe operator control stations Model(s) HE-XE or HM-ME, followed by 100, 102, 103, 104, 105 or 106, followed by any letter A to Z, followed by any letter A thru Z, followed any number 20 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XLe operator control stations Model(s) HE-XE, followed by 102, followed by any letter A to Z, followed by any letter A thru Z, followed by 83.

Class I, Division 2, Groups A, B, C and D, XLe operator control stations Model(s) HE-XE, followed by ME or WA, followed by 0, 2, 3, 4, 5 or 6, followed by any letter A to Z, followed by any letter A to Z, followed by any number 20 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XLe operator control stations Model(s) HE-XE102xx-83, which is identical to HE-XE102xx-183 and where xx follows the above letter and number identifiers.

Class I, Division 2, Groups A, B, C and D, XLe operator control stations Model(s) HEXE22, followed by 0, 1, 2, 3 or 4, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15,16, followed by any letter A to Z, followed by any letter A to Z, followed by any number 00 to 49, 100-499 or 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XLe operator control stations Model(s) XLe Operator Control Stations Series 3 alpha numeric digits or dash followed by XE followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5 or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, XLe operator control stations Model(s) XLe Operator Control Stations Series HEXE22 followed by 0, 1, 2, 3, 4 or 5, followed by C, followed by 0-9 followed by 00, 12, 13, 14, 15, 16, followed by dash 0 to 49 or 100-999.

Class I, Division 2, Groups A, B, C and D, XLT operator control stations Model(s) HE-XT or HM-MT, followed by 100, 102, 103, 104, 105 or 106, followed by any letter A to Z, followed by any letter A thru Z, followed by any number 20 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XLT operator control stations Model(s) HE-XT, followed by ME or WA, followed by 0, 2, 3, 4, 5 or 6, followed by any letter A to Z, followed by any letter A to Z, followed by any number 20 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XLT operator control stations Model(s) HEXT24, followed by 0, 1, 2, 3 or 4, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15 or 16, followed by any letter A to Z, followed by any letter A to Z, followed by any number 00 to 49, 100-499, 500-699 or 700-799.

Class I, Division 2, Groups A, B, C and D, XLT operator control stations Model(s) XLT Operator Control Stations Series 3 alpha numeric digits or dash followed by XT followed by 2 alpha numeric digits followed by 0, 2, 3, 4, 5 or 6 followed by dash 0 to 49 or 100 to 999. Part number may be truncated.

Class I, Division 2, Groups A, B, C and D, XLT Operator Control Stations Series Model(s) XLT Operator Control Stations Series HEXT24 followed by 0, 1, 2, 3, 4 or 5, followed by C, followed by 0-9, followed by 00, 12, 13, 14, 15, or 16, followed by dash 0 to 49 or 100-999.

Class I, Division 2, Groups A, B, C and D, X5 Operator Control Station Model(s) X5 Operator Control Station Series HE-followed by X, followed by 5, followed by any letter double combination A-Z, followed by any number between 100 and 999

Class I, Division 2, Groups A, B, C, and D Model(s) XLe Operator Control Stations Series HE-XE, followed x, where x can be 0-6, then E, followed by x which can be 0-6, followed by any letter A to Z, followed by any letter A thru Z, followed any number 20 to 49 or 100-499 or 500-699 or 700-799

Class I, Division 2, Groups A, B, C, and D Model(s) XLT Operator Control Stations Series HE-XT, followed by x, where x can be 0-6, then E, followed by x which can be 0-6, followed by any letter A to Z, followed by any letter A thru Z, followed any number 20 to 49 or 100-499 or 500-699 or 700-799

ethernet modules Model(s) HE800ETN250/HEETN250, ethernet modules

ethernet modules Model(s) HE800ETN250/HEETN250-15 thru HE800ETN250/HEETN250 -49

input/output modules Model(s) HE800DIQ516/616/711-40 thru HE800DIQ516/616/711-4 9

input/output modules Model(s) HE800MIX011/111/122/022-40 thru HE800MIX011/111/1 22/022-49

input/output modules Model(s) HEMIX011/111/122/022-40 thru HEMIX011/111/122/022 -49

input/output modules, SmartStack modules Model(s) HE693 followed by ASC, DAC, DRV, RTD, RTU, SNP, S TG, STP or THM, followed by three digits or NET or followed by three letters, may be followed by -01, -02, 05, -06, -08, -09, -12, -13, -14, -15, -18, -19, -20, -24 or -15 thru -49. followed by three digits or NET or followed by three letters, may be followed by -01, -02, 05, -06, -08, -09, -12, -13, -14, -15, -18, -19, -20, -24 or -15 thru -49. followed by three digits or NET or followed by three letters, may be followed by -01, -02, 05, -06, -08, -09, -12, -13, -14, -15, -18, -19, -20, -24 or -15 thru -49.

input/output modules, SmartStack modules Model(s) HE697 followed by ASC, DAC, DRV, RTD, RTU, SNP, S TG, STP or THM, followed by three digits or NET or followed by three letters, may be followed by -01, -02, 05, -06, -08, -09, -12, -13, -14, -15, -18, -19, -20, -24 or -15 thru -49. followed by three digits or NET or followed by three letters, may be followed by -01, -02, 05, -06, -08, -09, -12, -13, -14, -15, -18, -19, -20, -24 or -15 thru -49. followed by three digits or NET or followed by three letters, may be followed by -01, -02, 05, -06, -08, -09, -12, -13, -14, -15, -18, -19, -20, -24 or -15 thru -49.

input/output modules, SmartStack modules Model(s) HE800ADC010/HEADC010-15 thru HE800ADC010/HEADC010 -49

input/output modules, SmartStack modules Model(s) HE800ADC020/HEADC020-15 thru HE800ADC020/HEADC020 -49

input/output modules, SmartStack modules Model(s) HE800ADC110/HEADC110-15 thru HE800ADC110/HEADC110 -49

input/output modules, SmartStack modules Model(s) HE800ADC120/HEADC120-15 thru HE800ADC120/HEADC120 -49

input/output modules, SmartStack modules Model(s) HE800DAC001/HEDAC001-15 thru HE800DAC001/HEDAC001-4 9

input/output modules, SmartStack modules Model(s) HE800DAC002/HEDAC002-15 thru HE800DAC002/HEDAC002 -49

input/output modules, SmartStack modules Model(s) HE800DAC101/HEDAC101-15 thru HE800DAC101/HEDAC101 -49

input/output modules, SmartStack modules Model(s) HE800DIM210/HEDIM210-15 thru HE800DIM210/HEDIM210 -49

input/output modules, SmartStack modules Model(s) HE800DIQ511/HEDIQ511-15 thru HE800DIQ511/HEDIQ511 -49

input/output modules, SmartStack modules Model(s) HE800DIQ512/HEDIQ512-15 thru HE800DIQ512/HEDIQ512 -49

input/output modules, SmartStack modules Model(s) HE800DIQ524/HEDIQ524-15 thru HE800DIQ524/HEDIQ524 -49

input/output modules, SmartStack modules Model(s) HE800DIQ611/HEDIQ611-15 thru HE800DIQ611/HEDIQ611 -49

input/output modules, SmartStack modules Model(s) HE800DIQ612/HEDIQ612-15 thru HE800DIQ612/HEDIQ612 -49

input/output modules, SmartStack modules Model(s) HE800DIQ624/HEDIQ624-15 thru HE800DIQ624/HEDIQ624 -49

input/output modules, SmartStack modules Model(s) HE800DIQ716-04, input/output modules, SmartStack modules

input/output modules, SmartStack modules Model(s) HE800DIQ716-11, input/output modules, SmartStack modules

input/output modules, SmartStack modules Model(s) HE800DQM202/HEDQM202-15 thru HE800DQM202/HEDQM202 -49

input/output modules, SmartStack modules Model(s) HE800MIX901/HEMIX901-01, input/output modules, SmartStack modules

input/output modules, SmartStack modules Model(s) HE800MIX901/HEMIX901-04, input/output modules, SmartStack modules

input/output modules, SmartStack modules Model(s) HE800MIX901/HEMIX901-05, input/output modules, SmartStack modules

input/output modules, SmartStack modules Model(s) HE800MIX901/HEMIX901-15 thru -49, input/output modules, SmartStack modules

input/output modules, SmartStack modules Model(s) HE800MIX902/HEMIX902-15 thru HE800MIX902/HEMIX902 -49

input/output modules, SmartStack modules Model(s) HE800RTD000/HERTD000-15 thru HE800RTD000/HERTD000 -49

input/output modules, SmartStack modules Model(s) HE800RTD100/HERTD100-15 thru HE800RTD100/HERTD100 -49

input/output modules, SmartStack modules Model(s) HE800THM000/HETHM000-15 thru HE800THM000/HETHM000 -49

input/output modules, SmartStack modules Model(s) HE800THM100/HETHM100-15 thru HE800THM100/HETHM100 -49

mini OCS operator control station and remote control stations Model(s) HE500OCS may be followed by 052, 053, 082 or 083, may be followed by -02, -03, -07, -10 thru -17, or -20 thru -49.followed by -02, -03, -07, -10 thru -17, or -20 thru -49.followed by -02, -03, -07, -10 thru -17, or -20 thru -49.

mini OCS operator control station and remote control stations Model(s) HE500RCS may be followed by 052, 053, 082 or 083, may be followed by -02, -03, -07, -10 thru -17, or -20 thru -49.followed by -02, -03, -07, -10 thru -17, or -20 thru -49.followed by -02, -03, -07, -10 thru -17, or -20 thru -49.

mini OCS operator control station and remote control stations Model(s) IC300OCS may be followed by 052, 053, 082 or 083, may be followed by -02, -03, -07, -10 thru -17, or -20 thru -49.followed by -02, -03, -07, -10 thru -17, or -20 thru -49.followed by -02, -03, -07, -10 thru -17, or -20 thru -49.

mini OCS operator control station and remote control stations Model(s) IC300RCS may be followed by 052, 053, 082 or 083, may be followed by -02, -03, -07, -10 thru -17, or -20 thru -49.followed by -02, -03, -07, -10 thru -17, or -20 thru -49.followed by -02, -03, -07, -10 thru -17, or -20 thru -49.

operator control station and terminal interface modules Model(s) HE500 followed by TIU, followed by 050, 051, 100, 110.followed by 050, 051, 100, 110.followed by 050, 051, 100, 110.

operator control stations "NX Series OCS" Model(s) HE-NX followed by 220, 221, 222, 250, 251 or 252, followed by letters A to Z, followed by letters A to Z followed by a dash, followed by any number 20-49.followed by letters A to Z, followed by letters A to Z followed by a dash, followed by any number 20-49.followed by letters A to Z, followed by letters A to Z followed by a dash, followed by any number 20-49.

operator control stations "NX Series OCS" Model(s) HENX followed by 22, 25 or 26, followed by 0 or 1, followed by C, T or N, followed by 0, 1, 2 or 3, followed by 00, 01, 02, 03 or 05, followed by A-Z, followed by A-Z, followed by a dash, followed by 00-03, 10-17 or 20-49. followed by 0 or 1, followed by C, T or N, followed by 0, 1, 2 or 3, followed by 00, 01, 02, 03 or 05, followed by A-Z, followed by A-Z, followed by a dash, followed by 00-03, 10-17 or 20-49. followed by 0 or 1, followed by C, T or N, followed by 0, 1, 2 or 3, followed by 00, 01, 02, 03 or 05, followed by A-Z, followed by A-Z, followed by a dash, followed by 00-03, 10-17 or 20-49.

operator interface units Model(s) HE693 followed by GIU or TCR, followed by three digits, may be followed by -01, -02, -03, -04, -10, -24, -28 or -50 thru -98. followed by three digits, may be followed by -01, -02, -03, -04, -10, -24, -28 or -50 thru -98. followed by three digits, may be followed by -01, -02, -03, -04, -10, -24, -28 or -50 thru -98.

Programmable Controllers for use in Hazardous Locations, Class I, Div. 2 Groups A, B, C, and D., Compact controllers Model(s) HE-RCC1410, HE-RCC2414, HE-RCC8842, HE-RCC972

programmable logic controllers Model(s) HE-CX followed by 116, 251, 101 or 250, followed by any letter A-Z, followed by any letter A-Z, followed by any number 20-49. followed by any letter A-Z, followed by any letter A-Z, followed by any number 20-49. followed by any letter A-Z, followed by any number 20-49.

programmable logic controllers Model(s) HE500OCS036/IC300OCS036-10 thru HE500OCS036/IC300 OCS036-17

programmable logic controllers Model(s) HE500OCS036/IC300OCS036-20 thru HE500OCS036/IC300 OCS036-49

programmable logic controllers Model(s) HE500OCS037/IC300OCS037-10 thru HE500OCS037/IC300 OCS037-17

programmable logic controllers Model(s) HE500OCS037/IC300OCS037-20 thru HE500OCS037/IC300 OCS037-49

programmable logic controllers Model(s) HE500OCS041/IC300OCS041-10 thru HE500OCS041/IC300 OCS041-17

programmable logic controllers Model(s) HE500OCS041/IC300OCS041-20 thru HE500OCS041/IC300 OCS041-49

programmable logic controllers Model(s) HE500OCS042/IC300OCS042-10 thru HE500OCS042/IC300 OCS042-17

programmable logic controllers Model(s) HE500OCS042/IC300OCS042-20 thru HE500OCS042/IC300 OCS042-49

programmable logic controllers Model(s) HE500OCS052/IC300OCS052-10 thru HE500OCS052/IC300 OCS052-17

programmable logic controllers Model(s) HE500OCS052/IC300OCS052-20 thru HE500OCS052/IC300 OCS052-49

programmable logic controllers Model(s) HE500OCS053/IC300OCS053-10 thru HE500OCS053/IC300 OCS053-17

programmable logic controllers Model(s) HE500OCS053/IC300OCS053-20 thru HE500OCS053/IC300 OCS053-49

programmable logic controllers Model(s) HE500OCS066/IC300OCS066-10 thru HE500OCS066/IC300 OCS066-17

programmable logic controllers Model(s) HE500OCS066/IC300OCS066-20 thru HE500OCS066/IC300 OCS066-49

programmable logic controllers Model(s) HE500OCS067/IC300OCS067-10 thru HE500OCS067/IC300 OCS067-17

programmable logic controllers Model(s) HE500OCS067/IC300OCS067-20 thru HE500OCS067/IC300 OCS067-49

programmable logic controllers Model(s) HE500OCS071/IC300OCS071-10 thru HE500OCS071/IC300 OCS071-17

programmable logic controllers Model(s) HE500OCS071/IC300OCS071-20 thru HE500OCS071/IC300 OCS071-49

programmable logic controllers Model(s) HE500OCS072/IC300OCS072-10 thru HE500OCS072/IC300 OCS072-17

programmable logic controllers Model(s) HE500OCS072/IC300OCS072-20 thru HE500OCS072/IC300 OCS072-49

programmable logic controllers Model(s) HE500OCS082/IC300OCS082-10 thru HE500OCS082/IC300 OCS082-17

programmable logic controllers Model(s) HE500OCS082/IC300OCS082-20 thru HE500OCS082/IC300 OCS082-49

programmable logic controllers Model(s) HE500OCS083/IC300OCS083-10 thru HE500OCS083/IC300 OCS083-17

programmable logic controllers Model(s) HE500OCS083/IC300OCS083-20 thru HE500OCS083/IC300 OCS083-49

SmartStack I/O modules, open type Model(s) HE800ASC100/HEASC100-15 thru HE800ASC100/HEASC100 -49

SmartStack I/O modules, open type Model(s) HE800DIQ716, SmartStack I/O modules, open type, HE800DIQ716-01, SmartStack I/O modules, open type, HE800DIQ716-05, SmartStack I/O modules, open type

SmartStack I/O modules, open type Model(s) HE800DIQ716-15 thru HE800DIQ716-49, SmartStack I/O modules, open type

SmartStack I/O modules, open type Model(s) HE800DMX100/HEDMX100-15 thru HE800DMX100/HEDMX100 -49

SmartStack I/O modules, open type Model(s) HE800MIX901/HEMIX901, SmartStack I/O modules, open type

SmartStack I/O modules, open type Model(s) HE800MIX901/HEMIX901-11, SmartStack I/O modules, open type

SmartStack I/O modules, open type Model(s) HE800MIX901/HEMIX901-15 thru HE800MIX901/HEMIX901 -49

* - May be followed by a suffix.

The appearance of a company's name or product in this database does not in itself assure that products so identified have been manufactured under UL Solutions' Follow - Up Service. Only those products bearing the UL Mark should be considered to be Certified and covered under UL Solutions' Follow - Up Service. Always look for the Mark on the product.

UL Solutions permits the reproduction of the material contained in Product iQ subject to the following conditions: 1. The Guide Information, Assemblies, Constructions, Designs, Systems, and/or Certifications (files) must be presented in their entirety and in a non-misleading manner, without any manipulation of the data (or drawings). 2. The statement "Reprinted from Product iQ with permission from UL Solutions" must appear adjacent to the extracted material. In addition, the reprinted material must include a copyright notice in the following format: "©2023 UL LLC."