

7.1 - J1 Wiring: Relay & Digital Out

POS.	PIN	DIGITAL MODEL
1	R1	Relay 1 N.O.
2	C1	Relay 1 C
3	R2	Relay 2 N.O.
4	C2	Relay 2 C
5	R3	Relay 3 N.O.
6	C3	Relay 3 C
7	R4	Relay 4 N.O.
8	C4	Relay 4 C
9	R5	Relay 5 N.O.
10	C5	Relay 5 C
11	R6	Relay 6 N.O.
12	C6	Relay 6 C
13	Q1	Output 1
14	Q2	Output 2
15	V+	External V+
16	C	Common

NOTE: Internal 10kΩ resistors between: V+ and Q1; V+ and Q2


7.2 - J2 Wiring: Digital Input

POS.	PIN	DIGITAL MODEL
1	I1	Input 1
2	I2	Input 2
3	I3	Input 3
4	I4	Input 4
5	I5	Input 5
6	I6	Input 6
7	I7	Input 7
8	I8	Input 8
9	I9	Input 9 (HSC1)
10	I10	Input 10 (HSC2)
11	I11	Input 11 (HSC3)
12	I12	Input 12 (HSC4)
13	C	Common
14	C	Common

7.3 - Wiring Connectors:

PIN	SIGNAL	DESCRIPTION
1	DC+	Power Supply Voltage
2	DC-	Power Supply Common
3	Ground	Frame Ground

Primary Power Range:
24VDC +/- 20%

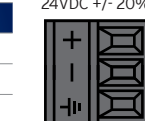

7.4 - J3 Wiring: Analog Wiring

2x4-20mA Input, 2x0-10V Input, and 2x4-20mA Output

PIN	Wire
1	A11 (%AI1)
2	R1+ (%AI1)
3	A12 (%AI2)
4	R2+ (%AI2)
5	A13 (AI3/%AQ1)
6	AQ1 (%AQ1)
7	A14 (AI4/%AQ2)
8	AQ2 (%AQ2)
9	C


2x3-Wire RTD, 2x0-10V Input, and 2x4-20mA Output

PIN	Wire / Connection
1	A11 (%AI1) RTD Sense
2	R1+ (%AI1) RTD Excitation
3	A12 (%AI2) RTD Sense
4	R2+ (%AI2) RTD Excitation
5	A13 (AI3/%AQ1) 0-10V Input
6	R3+ or AQ1 (AI3/%AQ1) mA Output
7	A14 (AI4/%AQ2) 0-10V Input
8	R4+ or AQ2 (AI4/%AQ2) mA Output
9	C - Common

RTD3 is unavailable.
RTD4 is unavailable.

2x2 - Wire RTD Connection

PIN	Wire	Connection
1	A11 (%AI1)	RTD Sense
2	R1+ (%AI1)	RTD Excitation
3	A12 (%AI2)	RTD Sense
4	R2+ (%AI2)	RTD Excitation
5	A13 (%AI3/%AQ1)	0-10V Input
6	R3+ or AQ1 (%AI3/AQ1)	4-20mA Output
7	A14 (%AI4/%AQ2)	0-10V Input
8	R4+ or AQ2 (%AI4/AQ2)	4-20mA Output
9	C	Common

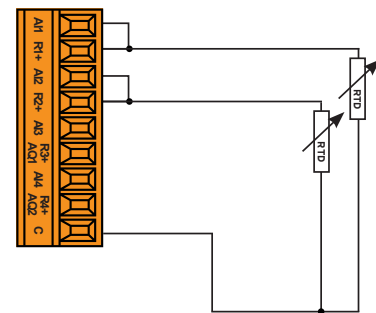

8 - Warnings

PRECAUTIONS

All applicable codes and standards need to be followed in the installation of this product. Adhere to the following safety precautions whenever any type of connection is made to the module:

1. Connect the safety (earth) ground on the power connector first before making any other connections.
2. When connecting to the electric circuits or pulse-initiating equipment, open their related breakers.
3. Do NOT make connection to live power lines.
4. Make connections to the module first; then connect to the circuit to be monitored.
5. Route power wires in a safe manner in accordance with good practice and local codes.
6. Wear proper personal protective equipment including safety glasses and insulated gloves when making connections to power circuits.
7. Ensure hands, shoes, and floor are dry before making any connection to a power line.
8. Make sure the unit is turned OFF before making connection to terminals.
9. Make sure all circuits are de-energized before making connections.
10. Before each use, inspect all cables for breaks or cracks in the insulation. Replace immediately if defective.
11. Use copper conductors in Field Wiring only, 60/75°C.
12. Do not disconnect while circuit is live unless area is known to be non-hazardous.
13. Do not remove or replace jumpers or connectors while circuit is live unless the area is known to be free of ignitable concentrations of flammable gases or vapors.
14. Use caution when making connections to the controller to protect against static discharge. Special care must be taken when replacing the battery or inserting or adjusting

I/O or communication boards.

15. Use caution when connecting controllers to PCs via serial or USB. PCs and especially laptops may use "floating power supplies" what are ungrounded. This could cause a voltage potential between the laptop and controller. Ensure the controller and laptop are grounded for maximum protection. Consider using a USB isolator due to voltage potential differences as a preventative measure.
16. Failure to follow these guidelines can damage the controller and/or controller.
17. If the equipment is used in a manner not specified by Horner APG, the protection provided by the equipment may be impaired.

FCC COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation

TECHNICAL SUPPORT

For further details, please refer to the Datasheet, MAN1138. For assistance and manual updates, contact Technical Support at the following locations:

North America
+1 (317) 916-4274
www.hornerautomation.com
techsppt@heapg.com

Europe
+353 (21) 4321-266
www.horner-apg.com
technical.support@horner-apg.com

MICRO OCS MODEL: HE-X4R-V20

MODEL R-V20 BUILT-IN I/O: 12 DIGITAL IN, 6 RELAY OUT, 2 PWM OUT,
2 ANALOG IN (0-10V), 2 ANALOG IN (4-20MA/RTD), 2 ANALOG OUT (4-20MA)

GETTING STARTED

1. Read this document to fully understand the X4R V20 and safety requirements.
2. Use Section 4 and the panel cutout dimensions to install the product.
3. Connect 24VDC power and I-O according to the quick start guide and datasheet.
4. Refer to the X4 User Manual (MAN1137) and X4R V20 Datasheet (MAN1409) for more information and instructions.



MAN1424_01_EN_X4_V20_QRG
April 2024

1 - General Specifications

1.1 General

Primary Power Range	24VDC +/- 20%
Typical Power Backlight at 100%	190mA @ 24VDC
Typical Power Backlight at 0%	105mA @ 24VDC 135mA @ 19.2VDC
Inrush Current	30mA < 1ms
Real Time Clock	Battery backed; lithium coin cell CR2450
Clock Accuracy	± 90 secs/month
Relative Humidity	5 to 95% Non-condensing
Operating Temperature	-10°C to +60°C
Storage Temperature	-20°C to +70°C
Weight	360g
Included in Box	Controller, 3 x I/O connectors, 4 x mounting clips, 1 x power connector, Quick Reference Guide
Certifications (UL/CE)	USA: https://hornerautomation.com/certifications/ Europe: http://www.horner-apg.com/en/support/certification.aspx

1.2 Connectivity

Serial Ports	1 x RS232, 1 x RS485
485 Terminations	On-board, software controlled
USB Programming Support	USB mini-B 2.0
CAN Hardware	CAN 2.0
CAN Port Connector	RJ45 (red)
CAN Port Termination	On-board, software controlled
Ethernet	1 x 10Mbps/100Mbps
Removable Memory In	microSD (SDHC, SDXC IN FAT32 format, support for 32 GB max. Application Updates, Datalogging, more)
Remote I/O	Onboard + SmartMod, Smart-Rail, SmartBlock, SmartStix

1.3 User Interface / Control & Logic

Display	4.3" 65k Color; 350 cd/m ² (nits)
Resolution	480 x 272 pixels
Backlight	White LED, 50,000 hrs.
Backlight Control	Software controlled (ON/OFF)
Control Language Support	Advanced ladder logic Full IEC 61131-3 languages

2 - Port Connectors



- 1 Touch Screen
- 2 microSD Slot USB Mini-B Port
- 3 RS232/RS485 Serial Connector
- 4 CAN Port (via RJ45)
- 5 LAN Port
- 6 USB Mini-B Port
- 7 Analog I/O (J3)
- 8 DC Inputs (J2)
- 9 DC Outputs (J1)
- 10 DC Power

NOTE: See Precaution #15 about USB and grounding.


3 - Installation Procedure

The X4R V20 utilizes a clip installation method to ensure a robust and watertight seal to the enclosure. Please follow the steps below for the proper installation and operation of the unit.

1. Carefully locate an appropriate place to mount the X4R V20. Be sure to leave enough room at the top of the unit for insertion and removal of the microSD™ card.
2. Carefully cut the host panel per the diagram, creating a 90.5mm x 119.5mm, with a tolerance of +/-0.5mm / -0mm, opening into which the X4R V20 may be installed. If the opening is too large, water may leak into the enclosure, potentially damaging the unit. If the opening is too small, the OCS may not fit through the hole without damage.
3. Remove any burrs and or sharp edges and ensure the panel is not warped in the cutting process.
4. Install and tighten the four mounting clips (provided in the box) until the gasket forms a tight seal. For standard composite mounting clips (included with product), use a torque rating of 2-3 in-lbs (0.23-0.34 Nm). For optional metal mounting clips, use a torque rating of 4-8 in lbs (0.45-0.90 Nm).
5. Connect communications cables to the serial port, USB ports, and CAN port as required.

4 - Panel Cut-Out

The graphics below detail the dimensions and depth of the overall controller itself. The X4R V20 panel cut-out measures 4.70" (119.5mm) wide x 3.56" (90.5mm) tall.

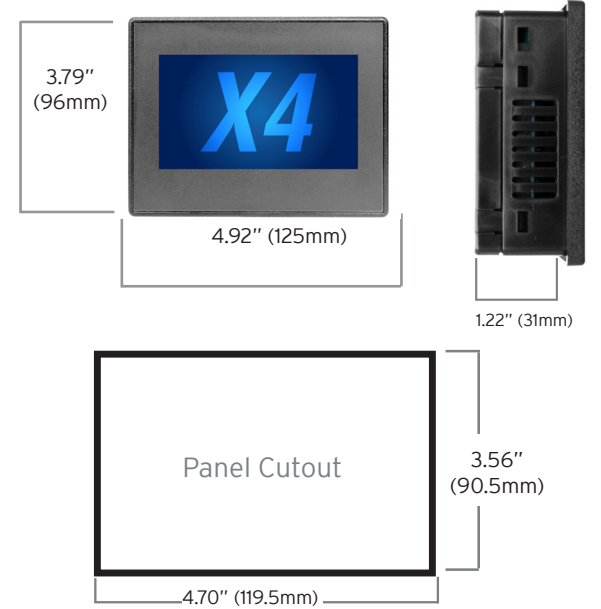

5 - HAZARDOUS LOCATION NOTICE

Power, input and output (I/O) wiring must be in accordance with Class 1, Division 2 wiring methods [Article 501-4(b) of the National Electrical Code, NFPA 70] for installations in the U.S. or as specified in Section 18-1J2 of the Canadian Electrical Code for installations within Canada and in accordance with the authority having jurisdiction.

1. THIS EQUIPMENT IS SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C, D or NON-HAZARDOUS LOCATIONS ONLY.
2. **WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.**

AVERTISSEMENT - RISQUE D'EXPLOSION LA SUBSTITUTION DE COMPOSANTS PEUT RENDRECE MATERIEL INACCEPTABLE POUR LES EMPLACEMENTS DE CLASSE I, DIVISION 2
3. **WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS AND FREE OF IGNITABLE CONCENTRATIONS.**

ATTENTION - RISQUE D'EXPLOSION - NE DECONNECTEZ PAS L'EQUIPEMENT A MOINS DE L'AVOIR MIS HORS TENSION OU QUE LA ZONE EST CONNUE NON-DANGEREUSE ET NE CONTIENT PAS DE CONCENTRATIONS INFLAMMABLES.

6 - Connecting the X4R V20 to a PC

The X4R V20 OCS can communicate with Cscape using USB to USB, USB to serial adapters, serial port communications via MJ1 Port, or CAN (CsCAN).

To communicate with the HE-X4R-V42 via USB, there typically is a driver provided with the installation of Cscape. If for any reason this was not installed properly, you can manually download the driver on Horner's website at: <https://hornerautomation.com/support-files>

Next, connect a PC's (Personal Computer running a Windows Microsoft operating system) USB port via USB cable to the USB mini B port on the X4 OCS.

Now that the X4R V20 is plugged in, go to the Cscape menu Controller --> Connection Wizard, choose your connection method. If you're connecting for the first time, we suggest connecting via USB.

If communication is established, the target indicator will show the mode of the controller Target: yy(R).

If the controller is not communicating, you may need to set the Target ID of the controller in Cscape or change the controllers ID on the unit itself. The Target ID allows directing communications to a particular unit when multiple units are connected via a CsCAN network. Units without CsCAN network ports respond to any network ID and do not require the ID to be configured.

For more information, review the Cscape Configuration chapter of the X4 OCS User Manual, MAN1137.