



MODEL 2:

12 DC In, 6 Relay Out, (4) 12-bit Analog IN

| J1 (Orange) Name | |
|------------------|----------------|
| I1 (%I1) | Digital In 1 |
| I2 (%I2) | Digital In 2 |
| I3 (%I3) | Digital In 3 |
| I4 (%I4) | Digital In 4 |
| I5 (%I5) | Digital In 5 |
| I6 (%I6) | Digital In 6 |
| I7 (%I7) | Digital In 7 |
| I8 (%I8) | Digital In 8 |
| H1 (%H1) | HSC1/Dig. In 9 |
| OV | Common |
| A1 (%AI1) | Analog In 1 |
| A2 (%AI2) | Analog In 2 |
| A3 (%AI3) | Analog In 3 |
| A4 (%AI4) | Analog In 4 |
| OV | Common |

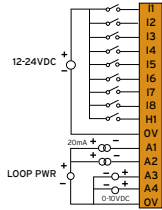


| J2 (Black) Name | |
|-----------------|-----------------|
| C6 (%Q6) | Relay 6 COM |
| R6 (%Q6) | Relay 6 NO |
| C5 (%Q5) | Relay 5 COM |
| R5 (%Q5) | Relay 5 NO |
| C4 (%Q4) | Relay 4 COM |
| R4 (%Q4) | Relay 4 NO |
| C3 (%Q3) | Relay 3 COM |
| R3 (%Q3) | Relay 3 NO |
| C2 (%Q2) | Relay 2 COM |
| R2 (%Q2) | Relay 2 NO |
| C1 (%Q1) | Relay 1 COM |
| R1 (%Q1) | Relay 1 NO |
| H4 (%Q112) | HSC4/Dig. In 12 |
| H3 (%Q111) | HSC3/Dig. In 11 |
| H2 (%Q110) | HSC2/Dig. In 10 |




MODEL 3:

12 DC In, 12 DC Out, (2) 12-bit Analog IN

| J1 (Orange) Name | |
|------------------|-----------------|
| I1 (%I1) | Digital In 1 |
| I2 (%I2) | Digital In 2 |
| I3 (%I3) | Digital In 3 |
| I4 (%I4) | Digital In 4 |
| I5 (%I5) | Digital In 5 |
| I6 (%I6) | Digital In 6 |
| I7 (%I7) | Digital In 7 |
| I8 (%I8) | Digital In 8 |
| H1 (%H1) | HSC1/Dig. In 9 |
| H2 (%H10) | HSC1/Dig. In 10 |
| H3 (%H11) | HSC1/Dig. In 11 |
| H4 (%H12) | HSC1/Dig. In 12 |
| A1 (%AI1) | Analog In 1 |
| A2 (%AI2) | Analog In 2 |
| OV | Common |

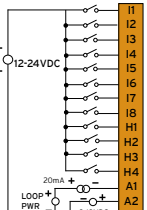


| J2 (Black) Name | |
|-----------------|----------------|
| OV | Common |
| V+ | V+ |
| NC | No Connect |
| Q12 (%Q12) | Digital Out 12 |
| Q11 (%Q11) | Digital Out 11 |
| Q10 (%Q10) | Digital Out 10 |
| Q9 (%Q9) | Digital Out 9 |
| Q8 (%Q8) | Digital Out 8 |
| Q7 (%Q7) | Digital Out 7 |
| Q6 (%Q6) | Digital Out 6 |
| Q5 (%Q5) | Digital Out 5 |
| Q4 (%Q4) | Digital Out 4 |
| Q3 (%Q3) | Digital Out 3 |
| Q2 (%Q2) | Dig. Out /PWM2 |
| Q1 (%Q1) | Dig. Out /PWM1 |



MODEL 4:

24 DC In, 16 DC Out, (2) 12-bit Analog IN


| J1 (Orange) Name | |
|------------------|-----------------|
| I1 (%I1) | Digital In 1 |
| I2 (%I2) | Digital In 2 |
| I3 (%I3) | Digital In 3 |
| I4 (%I4) | Digital In 4 |
| I5 (%I5) | Digital In 5 |
| I6 (%I6) | Digital In 6 |
| I7 (%I7) | Digital In 7 |
| I8 (%I8) | Digital In 8 |
| H1 (%H1) | HSC1/Dig. In 9 |
| H2 (%H10) | HSC1/Dig. In 10 |
| H3 (%H11) | HSC1/Dig. In 11 |
| H4 (%H12) | HSC1/Dig. In 12 |
| A1 (%AI1) | Analog In 1 |
| A2 (%AI2) | Analog In 2 |
| OV | Common |

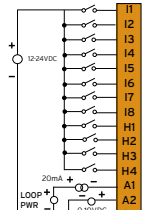


| J3 (Orange) Name | |
|------------------|---------------|
| I13 (%I13) | Digital In 13 |
| I14 (%I14) | Digital In 14 |
| I15 (%I15) | Digital In 15 |
| I16 (%I16) | Digital In 16 |
| I17 (%I17) | Digital In 17 |
| I18 (%I18) | Digital In 18 |
| I19 (%I19) | Digital In 19 |
| I20 (%I20) | Digital In 20 |
| I21 (%I21) | Digital In 21 |
| I22 (%I22) | Digital In 22 |
| I23 (%I23) | Digital In 23 |
| I24 (%I24) | Digital In 24 |
| OV | Common |



| J2 (Black) Name | |
|-----------------|----------------|
| OV | Common |
| V+ | V+ |
| Q13 (%Q13) | Digital Out 13 |
| Q12 (%Q12) | Digital Out 12 |
| Q11 (%Q11) | Digital Out 11 |
| Q10 (%Q10) | Digital Out 10 |
| Q9 (%Q9) | Digital Out 9 |
| Q8 (%Q8) | Digital Out 8 |
| Q7 (%Q7) | Digital Out 7 |
| Q6 (%Q6) | Digital Out 6 |
| Q5 (%Q5) | Digital Out 5 |
| Q4 (%Q4) | Digital Out 4 |
| Q3 (%Q3) | Digital Out 3 |
| Q2 (%Q2) | Dig. Out /PWM2 |
| Q1 (%Q1) | Dig. Out /PWM1 |




| J4 (Orange) Name | |
|------------------|----------------|
| Q14 (%Q14) | Digital Out 14 |
| Q15 (%Q15) | Digital Out 15 |
| Q16 (%Q16) | Digital Out 16 |




MODEL 5:

12 DC In, 12 DC Out, (2) 14/16-bit Analog IN (mA/V/Tc/mV/RTD), (2) 12-bit Analog Out



| J1 (Orange) Name | |
|------------------|-----------------|
| I1 (%I1) | Digital In 1 |
| I2 (%I2) | Digital In 2 |
| I3 (%I3) | Digital In 3 |
| I4 (%I4) | Digital In 4 |
| I5 (%I5) | Digital In 5 |
| I6 (%I6) | Digital In 6 |
| I7 (%I7) | Digital In 7 |
| I8 (%I8) | Digital In 8 |
| H1 (%H1) | HSC1/Dig. In 9 |
| H2 (%H10) | HSC2/Dig. In 10 |
| H3 (%H11) | HSC3/Dig. In 11 |
| H4 (%H12) | HSC4/Dig. In 12 |
| NC | No Connect |
| NC | No Connect |
| OV | Common |

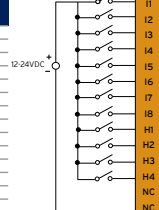

| J2 (Black) Name | |
|-----------------|----------------|
| OV | Common |
| V+ | Output Power |
| NC | No Connect |
| Q12 (%Q12) | Digital Out 12 |
| Q11 (%Q11) | Digital Out 11 |
| Q10 (%Q10) | Digital Out 10 |
| Q9 (%Q9) | Digital Out 9 |
| Q8 (%Q8) | Digital Out 8 |
| Q7 (%Q7) | Digital Out 7 |
| Q6 (%Q6) | Digital Out 6 |
| Q5 (%Q5) | Digital Out 5 |
| Q4 (%Q4) | Digital Out 4 |
| Q3 (%Q3) | Digital Out 3 |
| Q2 (%Q2) | Dig. Out /PWM2 |
| Q1 (%Q1) | Dig. Out /PWM1 |



| J3 (Orange) Name | |
|------------------|------------------------------------|
| T1+ (%AI1) | TC (+) or RTD (+) or 100 mV (+) |
| T1- (%AI1) | TC (-) or RTD (-) or 100 mV (-) |
| T2+ (%AI2) | TC (2+) or RTD (2+) or 100 mV (2+) |
| T2- (%AI2) | TC (2-) or RTD (2-) or 100 mV (2-) |
| AQ1 (%AQ9) | 10V or 20mA OUT (1) |
| AQ2 (%AQ10) | 10V or 20mA OUT (2) |
| OV | Common |
| MA1 (%AI1) | 0-20mA IN (1) |
| V1 (%AI1) | 0-10V IN (1) |
| OV | Common |
| MA2 (%AI2) | 0-20mA IN (2) |
| V2 (%AI2) | 0-10V IN (2) |
| OV | Common |

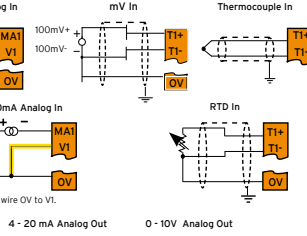


NOTE: Be sure to wire OV to V1.
NOTE: Loop power requirements are determined by the transmitter specification.


MODEL 6:

12 DC In, 12 DC Out, (6) 14/17-bit Analog IN (mA/V/TC/mV/RTD), (4) 12-bit Analog Out


| J1 (Orange/Green) Name | |
|------------------------|-------------------|
| I1 (%I1) | Digital In 1 |
| I2 (%I2) | Digital In 2 |
| I3 (%I3) | Digital In 3 |
| I4 (%I4) | Digital In 4 |
| I5 (%I5) | Digital In 5 |
| I6 (%I6) | Digital In 6 |
| I7 (%I7) | Digital In 7 |
| I8 (%I8) | Digital In 8 |
| H1 (%H1) | HSC1/V Dig. In 9 |
| H2 (%H10) | HSC2/V Dig. In 10 |
| H3 (%H11) | HSC3/V Dig. In 11 |
| H4 (%H12) | HSC4/V Dig. In 12 |
| OV | Common |
| A1A (%AI33) | Univ. AI 1 Pin 1 |
| A1B (%AI33) | Univ. AI 1 Pin 2 |
| A1C (%AI33) | Univ. AI 1 Pin 3 |
| NC | No Connect |
| A2A (%AI34) | Univ. AI 2 Pin 1 |
| A2B (%AI34) | Univ. AI 2 Pin 2 |
| A2C (%AI34) | Univ. AI 2 Pin 3 |
| NC | No Connect |




| J3 (Orange/Green) Name | |
|------------------------|------------------|
| NC | No Connection |
| A3A (%AI35) | Univ. AI 3 Pin 1 |
| A3B (%AI35) | Univ. AI 3 Pin 2 |
| A3C (%AI35) | Univ. AI 3 Pin 3 |
| NC | No Connection |
| A4A (%AI36) | Univ. AI 4 Pin 1 |
| A4B (%AI36) | Univ. AI 4 Pin 2 |
| A4C (%AI36) | Univ. AI 4 Pin 3 |
| NC | No Connection |
| A5A (%AI37) | Univ. AI 5 Pin 1 |
| A5B (%AI37) | Univ. AI 5 Pin 2 |
| A5C (%AI37) | Univ. AI 5 Pin 3 |
| NC | No Connection |
| A6A (%AI38) | Univ. AI 6 Pin 1 |
| A6B (%AI38) | Univ. AI 6 Pin 2 |
| A6C (%AI38) | Univ. AI 6 Pin 3 |
| OV | Common |
| V4 (%AQ12) | V OUT 4* |



| J2 (Black/Green) Name | |
|-----------------------|----------------|
| V3 (%AQ1) | V Out 3* |
| V2 (%AQ10) | V Out 2* |
| V1 (%AQ9) | V Out 1* |
| mA4 (%Q4) | mA Out 4* |
| mA3 (%Q3) | mA Out 3* |
| mA2 (%Q2) | mA Out 2* |
| mA1 (%Q1) | mA Out 1* |
| Q1 | Dig. Out /PWM1 |
| Q2 | Dig. Out /PWM2 |
| Q3 | Digital Out 3 |
| Q4 | Digital Out 4 |
| Q5 | Digital Out 5 |
| Q6 | Digital Out 6 |
| Q7 | Digital Out 7 |
| Q8 | Digital Out 8 |
| Q9 | Digital Out 9 |
| Q10 | Digital Out 10 |
| Q11 | Digital Out 11 |
| Q12 | Digital Out 12 |
| V+ | V External+ |
| OV | Common |



NOTE: * Both mA & V outputs are active for each output channel, however, only the configured output type is calibrated (maximum 4 channels simultaneously).



| Primary Power Port Pins | | |
|-------------------------|--------|----------------------------|
| PIN | SIGNAL | DIGITAL MODEL |
| 1 | Ground | Frame Ground |
| 2 | DC- | Input Power Supply Ground |
| 3 | DC+ | Input Power Supply Voltage |

NOTE: Primary Power Range: 10-30VDC

Precautions

All applicable codes and standards need to be followed in the installation of this product. Adhere to the following safety precautions whenever any type of connection is made to the module:

1. Connect the safety (earth) ground on the power connector first before making any other connections.
2. When connecting to the electric circuits or pulse-initiating equipment, open their related breakers.
3. Do NOT make connection to live power lines.
4. Make connections to the module first; then connect to the circuit to be monitored.
5. Route power wires in a safe manner in accordance with good practice and local codes.
6. Wear proper personal protective equipment including safety glasses and insulated gloves when making connections to power circuits.
7. Ensure hands, shoes, and floor are dry before making any connection to a power line.
8. Make sure the unit is turned OFF before making connection to terminals.
9. Make sure all circuits are de-energized before making connections.
10. Before each use, inspect all cables for breaks or cracks in the insulation. Replace immediately if defective.
11. Use copper conductors in Field Wiring only, 60/75° C.
12. Do not disconnect while circuit is live unless area is known to be non-hazardous.
13. Do not remove or replace jumpers or connectors while circuit is live unless the area is known to be free of ignitable concentrations of flammable gases or vapors.
14. EXPLOSION HAZARD - substitution of components may impair suitability for Class I, Division 2.
15. Use caution when making connections to the controller to protect against static discharge. Special care must be taken when replacing the battery or inserting or adjusting I/O or communication boards.
16. Use caution when connecting controllers to PCs via serial or USB. PCs and especially laptops may use "floating power supplies" what are ungrounded. This could cause a voltage potential between the laptop and controller. Make sure the controller and laptop are grounded for maximum protection.
17. Failure to follow these guidelines can damage the controller and/or controller.

Hazardous Location Notice

Power, input and output (I/O) wiring must be in accordance with Class 1, Division 2 wiring methods [Article 501-4(b) of the National Electrical Code, NFPA 70] for installations in the U.S. or as specified in Section 18-1J2 of the Canadian Electrical Code for installations within Canada and in accordance with the authority having jurisdiction.

1. THIS EQUIPMENT IS SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A B C D or NON-HAZARDOUS LOCATIONS ONLY.
2. WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.

AVERTISSEMENT - RISQUE D'EXPLOSION LA SUBSTITUTION DE COMPOSANTS PEUT RENDRE MATE RIEL INACCEPTABLE POUR LES EMPLACEMENTS DE CLASSE I, DIVISION 2
 WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS AND FREE OF IGNITABLE CONCENTRATIONS.
 ATTENTION - RISQUE D'EXPLOSION - NE DECONNECTEZ PAS L'EQUIPEMENT A MOINS DE L'AVOIR MIS HORS TENSION OU QUE LA ZONE EST CONNUE NON-DANGEREUSE ET NE CONTIENT PAS DE CONCENTRATIONS INFLAMMABLES.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation

Technical Support

For further details, please refer to the datasheets. For assistance and manual updates, contact Technical Support at the following locations:

North America
 +1 (317) 916-4274
www.hornerautomation.com
 techsppt@heapg.com


Europe
 +353 (21) 4321-266
www.hornerautomation.eu
 technical.support@horner-apg.com

Installation Procedure

The Canvas 4 utilizes a clip installation method to ensure a robust and watertight seal to the enclosure. Please follow the steps below for the proper installation and operation of the unit. This equipment is a panel mounted device and is meant to be installed in an enclosure suitable for the environment, such that the equipment is only accessible with the use of a tool.

1. Carefully locate an appropriate place to mount the Canvas 4. Be sure to leave enough room at the top of the unit for insertion and removal of the microSD™ card.
2. Carefully cut the host panel per the diagram, creating a 92 mm x 92 mm (with a tolerance of ±0.1 mm) potentially damaging the unit. If the opening is too small, the OCS may not fit through the hole without damage.
3. Remove any burrs and or sharp edges and ensure the panel is not warped in the cutting process.
4. Install and tighten the four mounting clips (provided in the box) until the gasket forms a tight seal. For included mounting clips, use a torque rating of 7-10 in-lbs (0.79-1.13 N·m).
5. Connect communications cables to the serial port, USB ports, and CAN port as required.

Port Connectors / Panel Cutout

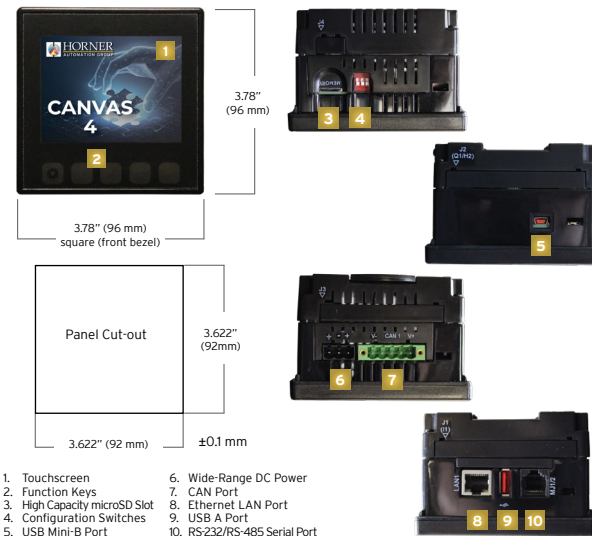

1. Touchscreen
2. Function Keys
3. High Capacity microSD Slot
4. Configuration Switches
5. USB Mini-B Port
6. Wide-Range DC Power
7. CAN Port
8. Ethernet LAN Port
9. USB A Port
10. RS-232/RS-485 Serial Port

NOTE: See Precaution #16 about USB and grounding.



MAN1365_00_EN_CV4_QRG

Canvas 4 - HE-CV-035C

GETTING STARTED

1. Read this document to fully understand the Canvas 4 and safety requirements
2. Connect 24VDC power and I/O according to the quick reference guide and data sheet.
3. Refer to the Canvas 4 User Manual for further instructions, MAN1364.



| | |
|--------------------------|---|
| Required Power (Inrush) | 2A for < 1ms @ 24VDC |
| Primary Power Range | 10-30VDC |
| Relative Humidity | 5 to 95% , Non-Condensing |
| Clock Accuracy | ± 20 ppm maximum at 25°C (± 1 min/month) |
| Real Time Clock | Battery Backed, lithium coin |
| Operating Temperature | -10°C to +60°C |
| Storage Temperature | -20°C to +60°C |
| Weight | 12 oz (340g) without I/O |
| Altitude | Up to 2000m |
| Related Pollution Degree | Evaluated for Pollution Degree 2 Rating |
| Certifications (UL/CE) | North America: https://hornerautomation.com/certifications/ Europe: http://www.horner-apg.com/en/support/certification.aspx |