


Canvas 7 Datasheet - Model 5

12 DC In, 12 DC Out, 2 - 14/16-bit Analog In(mA/V/TC/mV/RTD), 2 - 12-bit Analog Out
MAN1381_00_EN_CV7_Mod5

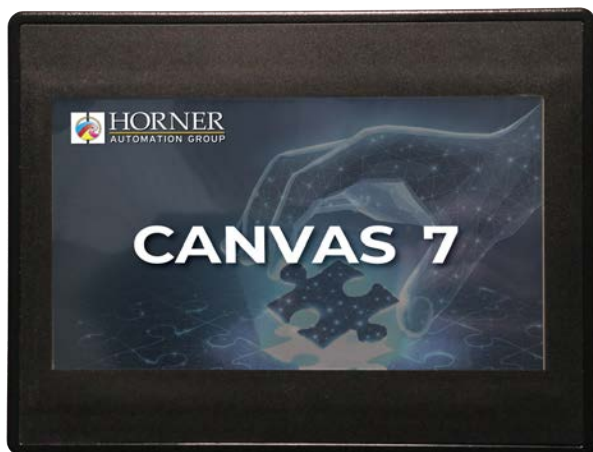

Part Number: HE-CV-070C-05

User Manual and Add-Ons

Find the documents via the [Documentation Search](#).

| Part # | Description |
|-------------|---|
| MAN1375 | Canvas 7 User Manual |
| MAN1142 | Rechargeable Battery Manual |
| HE-BAT019 | Rechargeable 3.6V Lithium Battery |
| HE-XCK | Programming Cables |
| HE-XDAC | 2 channel Analog Output I/O option kit, selectable 0-10V, +/-10V, 4-20mA. |
| HE-XDAC107 | 4 channel Analog Output I/O option kit, selectable 0-10V, +/-10V, 4-20mA. |
| HE-XKIT | Blank I/O Board |
| HE200MJ2TRM | Adapter, RJ45 (8P8C) male to 8-position terminal strip. |
| HE-FBD001 | Ferrite core for filtering out electrical noise. |

Battery Maintenance

The Canvas 7 uses a Renata CR2032 lithium battery to run the Real Time Clock. The battery life is 7-10 years.

For more information on the battery, see **MAN1375**.

Table of Contents

| | |
|--|-----------|
| Part Number: HE-CV-070C-05 | 1 |
| User Manual and Add-Ons | 1 |
| Battery Maintenance | 1 |
| TECHNICAL SPECIFICATIONS | 2 |
| General Specifications | 2 |
| Backlight | 2 |
| Control and Logic | 3 |
| User Interface | 3 |
| Connectivity | 3 |
| CONTROLLER OVERVIEW | 4 |
| Power Wiring | 5 |
| MODEL 5 SPECIFICATIONS | 6 |
| Digital DC Input | 6 |
| Digital DC Outputs | 6 |
| Analog Inputs, High Resolution | 7 |
| Analog Outputs | 8 |
| WIRING: INPUTS AND OUTPUTS | 9 |
| Analog Inputs Information | 9 |
| Digital Inputs | 9 |
| Positive Logic vs. Negative Logic | 9 |
| Jumper Settings for Model 5 | 10 |
| Screw Torque for Reattaching Back Cover After I/O | |
| Jumper Update | 10 |
| J1 (Orange) Wiring - Positive Logic - Digital Inputs | 11 |
| J2 (Black) Wiring - Positive Logic - Digital Outputs | 12 |
| J3 (Orange) Wiring - TC & RTD | 13 |
| Built-In I/O | 14 |
| Analog Input Transient-Voltage-Suppression Diode | |
| Failure | 14 |
| COMMUNICATIONS | 15 |
| Serial Communication | 15 |
| Ethernet | 15 |
| DIP Switches | 15 |
| CAN Communications | 16 |
| DIMENSIONS & INSTALLATION | 17 |
| Dimensions & Panel Cutout | 17 |
| Installation Information | 17 |
| Installation Procedure | 18 |
| SAFETY & MAINTENANCE | 19 |
| Warnings | 19 |
| FCC Compliance | 19 |
| Precautions | 19 |

TECHNICAL SPECIFICATIONS

General Specifications

| | |
|-------------------------|---|
| Required Power (Inrush) | 25A for < 1ms @ 24VDC, DC switched |
| Primary Power Range | 10 - 30VDC |
| Maximum Current | 1000mA |
| Relative Humidity | 5 to 95%, Non-Condensing |
| Clock Accuracy | ± 20 ppm maximum at 25°C (± 1 min/month) |
| Real Time Clock | Battery Backed, Lithium Coin |
| Operating Temperature | -10°C to +60°C |
| Storage Temperature | -20°C to +60°C |
| Weight | 63.0oz (1785g) |
| Altitude | Up to 2000m |
| Rated Pollution Degree | Degree 2 Rating |
| Certifications (UL/CE) | North America or Europe |
| Enclosure Type | 1, 3R, 4, 4X, 12, 12K, & 13 |

Backlight

| | | |
|----------------------------|---------------------------------|---|
| HE-CV-070C-00 (Model 0) | Typical Power Backlight at 100% | 415mA@10V(4.15W);191mA@24VDC(4.584W) |
| | Power Backlight at 50% | 111mA@24VDC(2.66W) |
| | Power Backlight Off | 105mA@24VDC(2.52W) |
| HE-CV-070C-02 (Model 2) | Typical Power Backlight at 100% | 546mA@10VDC(5.46W); 248mA@24VDC(5.952W) |
| | Power Backlight at 50% | 168mA@24VDC(4.03W) |
| | Power Backlight Off | 162mA@24VDC(3.89W) |
| HE-CV-070C-03 (Model 3) | Typical Power Backlight at 100% | 443mA@10VDC(4.43W); 243mA@24VDC(5.832W) |
| | Power Backlight at 50% | 163mA@24VDC(3.91W) |
| | Power Backlight Off | 157mA@24VDC(3.77W) |
| HE-CV-070C-04 (Model 4) | Typical Power Backlight at 100% | 452mA@10VDC(4.52W); 259mA@24VDC(6.216W) |
| | Power Backlight at 50% | 179mA@24VDC(4.30W) |
| | Power Backlight Off | 173mA@24VDC(4.15W) |
| HE-CV-070C-05 (Model 5) | Typical Power Backlight at 100% | 618mA@10VDC(6.18W); 309mA@24VDC(7.416W) |
| | Power Backlight at 50% | 229mA@24VDC(5.50W) |
| | Power Backlight Off | 223mA@24VDC(5.35W) |
| HE-CV-070C-06 (Model 6) | Typical Power Backlight at 100% | 602mA@10VDC(6.02W); 277mA@24VDC(6.648W) |
| | Power Backlight at 50% | 197mA@24VDC(4.73W) |
| | Power Backlight Off | 191mA@24VDC(4.58W) |

Control and Logic

| | |
|------------------------------------|--|
| Control Language Support | Register-Based Advanced Ladder Logic; Variable-Based Advanced Ladder IEC 61131-3 Languages |
| Logic Program Size | 2MB, maximum |
| Scan Rate | 0.02ms/kB |
| Digital Inputs and Digital Outputs | 2048 |
| Analog Inputs and Analog Outputs | 512 |
| General Purpose Registers | 50,000 (words) Retentive 16,384 (bits) Retentive 16,384 (bits) Non-retentive |

User Interface

| | |
|-----------------------|---------------------------------------|
| Display Type | 7" TFT Color |
| Resolution | 800 x 480 |
| Color | 16-bit (65,536) |
| Screen Brightness | 420 nits |
| Screen Memory | 17MB |
| User-Program. Screens | 1023 max pages; 1023 objects per page |
| Backlight | LED - 50,000 hour life |

Connectivity

| | |
|-----------------------|--|
| Serial Ports | 1 RS-232 & 1 RS-485 on first Modular Jack (MJ1/2) 1 RS-232 or 1 RS-485 on second Modular Jack (MJ3) |
| USB mini-B | USB 2.0 (480Kbps) Programming & Data Access |
| USB A (500mA max) | USB 2.0 (480Kbps) for USB flash drives (2TB), Wi-Fi, cameras, mice and keyboards |
| CAN Port Isolated 1kV | Remote I/O, Peer-to-peer Comms, Cscape |
| CAN Protocols | CsCAN, CANopen, DeviceNet, J1939 |
| Ethernet | 10/100 Mb (Auto-MDX) |
| Ethernet Protocols | TCP/IP, Modbus TCP, FTP, SMTP, EGD, ICMP, ASCII |
| Remote I/O | OCS-I/O |
| Removable Memory | microSD, SDHC, SDXC (in FAT32 format), support for 32GB max. Application Updates, Datalogging |

USB Webcams

USB Webcams supported should support the UVC (USB Video class) protocol for the OCS to be able to display video. Most USB based video devices support this today. Special feature such as zoom and high definition are not supported by the OCS

CONTROLLER OVERVIEW




HG-745

1. Touchscreen
2. USB Type A 2.0
3. LAN Port
4. Power: 10-30VDC In
5. CAN Port
6. MJ3: RS-232/ RS-485
7. DIP Switches
8. MJ1/MJ2: RJ45 Serial Port
9. microSD: Data Storage
10. USB Type Mini B: Programming

NOTE: Use caution when connecting controllers to PCs by way of serial or USB. PCs, especially laptops may use “floating power supplies” that are ungrounded. This could cause a damaging voltage potential between the laptop and controller. Ensure the controller and laptop are grounded for maximum protection. Consider using a USB isolator due to voltage potential differences as a preventative measure.

Power Wiring

NOTE: The Primary Power Range is 10VDC to 30VDC.

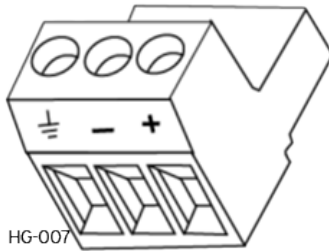

| Primary Power Port Pins | | |
|-------------------------|--------|----------------------------|
| PIN | Signal | Description |
| 1 | Ground | Frame Ground |
| 2 | DC- | Input Power Supply Ground |
| 3 | DC+ | Input Power Supply Voltage |

DC Input / Frame

- Solid/Stranded Wire: 12-24 AWG (2.5-0.2mm²)
- Strip length: 0.28" (7mm)
- Torque, Terminal Hold-Down Screws: 4.5 – 7 in•lbs (0.50 – 0.78 N•m)
- DC- is internally connected to I/O V-, but is isolated from CAN V-. A Class 2 power supply must be used.

Power Up

1. **OPTION:** Attach ferrite core with a minimum of two turns of the DC+ and DC- signals from the DC supply that is powering the controllers.



2. Connect to earth ground.
3. Apply recommended power.

MODEL 5 SPECIFICATIONS

Digital DC Input

| | | |
|--------------------------------------|--|----------------|
| Inputs per Module | 12 Including 4 Configurable HSC Inputs | |
| Commons per Module | 1 | |
| Input Voltage Range | 12VDC/24VDC | |
| Absolute Maximum Voltage | 30VDC | |
| Input Impedance | 10k Ω | |
| Input Current | Positive Logic | Negative Logic |
| Upper Threshold | 0.8mA | -1.6mA |
| Lower Threshold | 0.3mA | -2.1mA |
| Maximum Upper Threshold | 8VDC | |
| Minimum Lower Threshold | 3VDC | |
| OFF to ON Response | 1ms | |
| ON to OFF Response | 1ms | |
| High Speed Counter Maximum Frequency | 1MHz (Quadrature Frequency 500kHz) | |

Digital DC Outputs

| | | |
|---------------------------------------|---|--|
| Outputs per Module | 16 Including 2 Configurable PWM Outputs | |
| Commons per Module | 1 | |
| Output Type | Sourcing/10k Ω Pull-Down | |
| Output Frequency | 10kHz (up to 500kHz when using the HE-XHSQ add-on module) | |
| Absolute Maximum Voltage | 28VDC | |
| Output Protection | Short Circuit | |
| Maximum Output Current/Point | 0.5A | |
| Maximum Total Current | 4A Continuous | |
| Maximum Output Supply Voltage | 30VDC | |
| Minimum Output Supply Voltage | 10VDC | |
| Maximum Voltage Drop at Rated Current | 0.25VDC | |
| Maximum Inrush Current | 650mA per Channel | |
| Minimum Load | None | |
| OFF to ON Response | 1ms | |
| ON to OFF Response | 1ms | |
| Output Characteristics | Current Sourcing (Positive Logic) | |
| Rise Time | 50 - 115 μ s | |
| Fall Time | 8-20 μ s | |

Analog Inputs, High Resolution

| | |
|--|--|
| Number of Channels | 2 |
| Input Ranges (Selectable) | 0-10VDC; 0-20mA; 4-20mA; 100mV; PT100 RTD (-200 to 850°C); J, K, N, T, E, R, S, B Thermocouples |
| Safe Input Voltage Range | 10VDC: -0.5V to +15V; 20mA: -0.5V to +6V; RTD/T/C: +/- 24VDC |
| Nominal Resolution | 10V, 20mA, 100mV: 14 Bits; RTD, Thermocouple: 16 Bits |
| Input Impedance (Clamped @ -0.5VDC to 12VDC) | Current Mode: 100Ω , 35mA Max. Continuous Voltage Mode: 500kΩ, 25mA Max. Continuous |
| %AI Full Scale | 10V, 20mA, 100mV: 32,000 counts full scale RTD/TC: 20 Counts / °C |
| Maximum Over-Current | 35mA |
| Open Thermocouple Detect Current | 50nA |
| Thermocouple: B/R/S E T J K/N | Temperature Range: 32°F to 2,912°F (0°C to 1,600°C) -328°F to 1,652°F (-200°C to 900°C) -400°F to 752°F (-240°C to 400°C) -346°F to 1,382°F (-210°C to 750°C) -400°F to 2,498°F (-240°C to 1, 370°C) |
| Thermocouple Common Mode Range | ± 10V |
| Converter Type | Delta Sigma |
| Maximum Error at 25°C (*excluding zero) | *4-20mA ± 0.10% of full scale *0-20mA ± 0.10% of full scale *0-10VDC ± 0.10% of full scale RTD (PT100) ± 1.0 C° of full scale 0-100mV ± 0.05% of full scale |
| Maximum Thermocouple Error (After Warmup of 1-hour) | ±0.2% (±0.3% below -100°C) of full scale |
| Conversion Speed, Both Channels Converted | 10V, 20mA, 100mV: 30 Times/Second RTD Thermocouple: 7.5 Times/Second |
| Conversion Time per Channel | 10V, 20mA, 100mV: 16.7 ms; RTD, Thermocouple: 66.7 ms |
| RTD Excitation Current | 250μA |


Analog Outputs

| | |
|--|---|
| Number of Channels | 2 |
| Output Ranges | 0-10VDC , 0-20mA |
| Nominal Resolution | 12 Bits |
| Update Rate | Once per PLC scan |
| Maximum Error at 25°C (Excluding Zero) | 20mA 0.1% of full scale; 0 - 10V 0.1% of full scale |
| Minimum 10V Load | 1kΩ |
| Maximum 20mA Load | 500Ω |
| Analog Outputs; Output Point required | 2 |
| Additional Error for Temperature (Other Than 25°C) | 20mA..... 0.000143%/ °C; 0 - 10V.... 0.000151%/ °C |

WIRING: INPUTS AND OUTPUTS

Analog Inputs Information

Raw input values for channels 1-4 are found in the registers as Integer-type data with a range from 0 – 32000. Analog inputs may be filtered digitally with the Filter Constant found in the Cscape Hardware Configuration for Analog Inputs. Valid filter values are 0-7 and act according to the following chart:

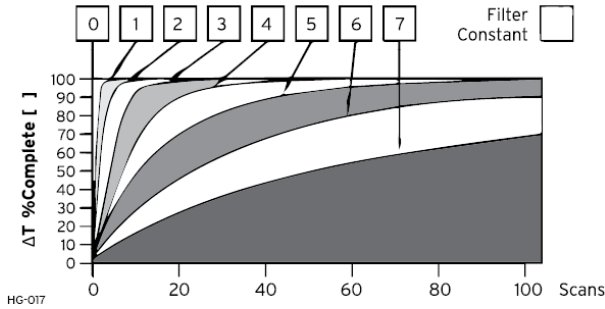


| Data Values | |
|----------------|--|
| Input Mode: | Data Format, 12-bit INT: |
| 0-20mA, 4-20mA | 0-32000 |
| 0-10V | 0-32000 |
| T/C & RTD | Temperature in °C to 1 decimal place (xxx.y) NOTE: The value in the %AI is an integer. The value should be divided by 20 to get temperature in °C. |

Digital Inputs

Positive Logic vs. Negative Logic


The OCS can be wired for positive logic inputs or negative.

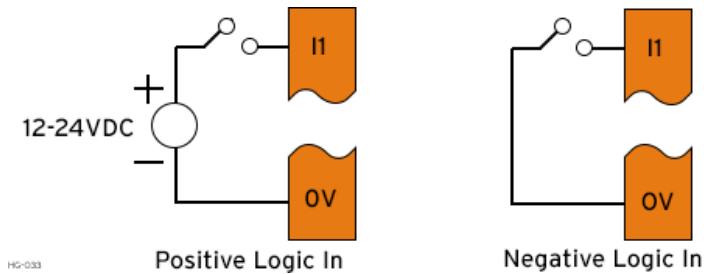

Digital inputs may be wired in either a Positive Logic or Negative Logic fashion as shown. The setting in the Cscape Hardware Configuration for the Digital Inputs must match the wiring used in order for the correct input states to be registered. When used as a normal input and not for high speed functions, the state of the input is reflected in registers %I1 – %I12. Digital inputs may alternately be specified for use with High Speed Counter functions, also found in the Hardware Configuration for Digital Inputs.


Jumper Settings for Model 5

Location of I/O jumpers (JP1 - JP4) and wiring connectors (J1 -J3) with back cover removed:

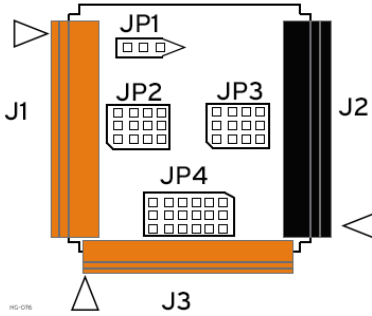

JP1 - Digital DC Inputs


JP1 Digital DC Inputs



HG-077

JP2 & JP3 - Analog Input Settings


JP2 & J3 Analog Input Settings

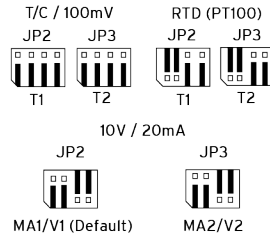

HG-078

JP4 - Analog Output Setting

JP4 - Analog Output Setting

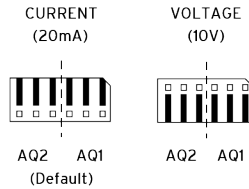


HG-079

Screw Torque for Reattaching Back Cover After I/O Jumper Update

| | |
|---|------------------------------------|
| XLE/XLT, XL4/XL4 Prime, EXL6/XL6 Prime, Canvas 4 | 3.0 - 4.0 in•lbs (0.34 - 0.45 N•m) |
| EXLW/ XLW Prime, XL7/XL7 Prime, EXL10/XL10 Prime, Canvas 7, Canvas 7D, Canvas 10D | 3.0 - 3.5 in•lbs (0.34 - 0.40 N•m) |


J1 (Orange) Wiring - Positive Logic - Digital Inputs

| Pin | Signal Name |
|-----------|--------------------|
| I1 (%I1) | Digital In 1 |
| I2 (%I2) | Digital In 2 |
| I3 (%I3) | Digital In 3 |
| I4 (%I4) | Digital In 4 |
| I5 (%I5) | Digital In 5 |
| I6 (%I6) | Digital In 6 |
| I7 (%I7) | Digital In 7 |
| I8 (%I8) | Digital In 8 |
| H1 (%I9) | HSC1/Digital In 9 |
| H2 (%I10) | HSC2/Digital In 10 |
| H3 (%I11) | HSC3/Digital In 11 |
| H4 (%I12) | HSC4/Digital In 12 |
| NC | No Connect |
| NC | No Connect |
| 0V | Common |

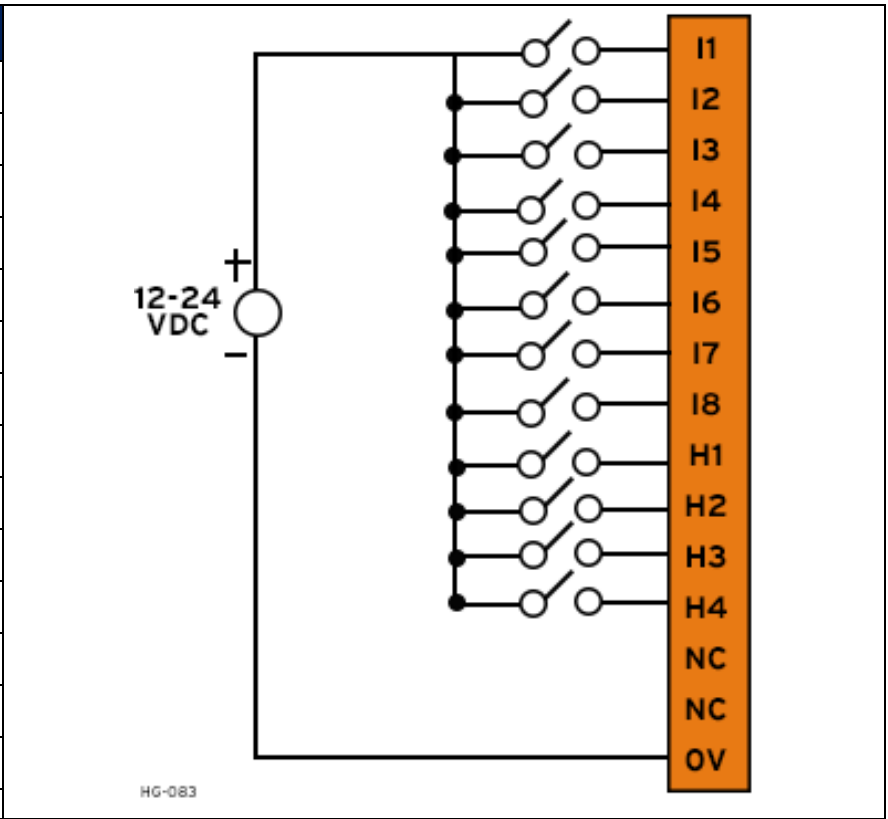

J2 (Black) Wiring - Positive Logic - Digital Outputs

| Pin | Signal Name |
|------------|------------------|
| 0V | Common |
| V+ | Output Power |
| NC | No Connect |
| Q12 (%Q12) | Digital Out 12 |
| Q11 (%Q11) | Digital Out 11 |
| Q10 (%Q10) | Digital Out 10 |
| Q9 (%Q9) | Digital Out 9 |
| Q8 (%Q8) | Digital Out 8 |
| Q7 (%Q7) | Digital Out 7 |
| Q6 (%Q6) | Digital Out 6 |
| Q5 (%Q5) | Digital Out 5 |
| Q4 (%Q4) | Digital Out 4 |
| Q3 (%Q3) | Digital Out 3 |
| Q2 (%Q2) | Digital Out/PWM2 |
| Q1 (%Q1) | Digital Out/PWM1 |

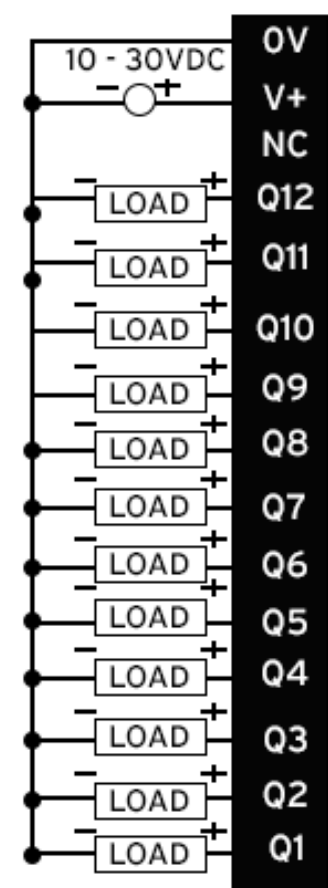


HG-072

J3 (Orange) Wiring - TC & RTD

| Pin | Signal Name |
|-------------|-----------------------------------|
| T1+ (%AI1) | TC (1+) or RTD (1+) or 100mV (1+) |
| T1- (%AI1) | TC (1-) or RTD (1-) or 100mV (1-) |
| T2+ (%AI2) | TC (2+) or RTD (2+) or 100mV (2+) |
| T2- (%AI2) | TC (2-) or RTD (2-) or 100mV (2-) |
| AQ1 (%AQ9) | 10 V or 20mA OUT (1) |
| AQ2 (%AQ10) | 10 V or 20mA OUT (2) |
| 0V | Common |
| MA1 (%AI1) | 0-20mA IN (1) |
| V1 (%AI1) | 0-10V IN (1) |
| 0V | Common |
| MA 2(%AI2) | 0-20mA IN (2) |
| V2 (%AI2) | 0-10V IN (2) |
| 0V | Common |

T1+
T1-
T2+
T2-
AQ1
AQ2
0V
MA1
V1
0V
MA2
V2
0V

HG-239

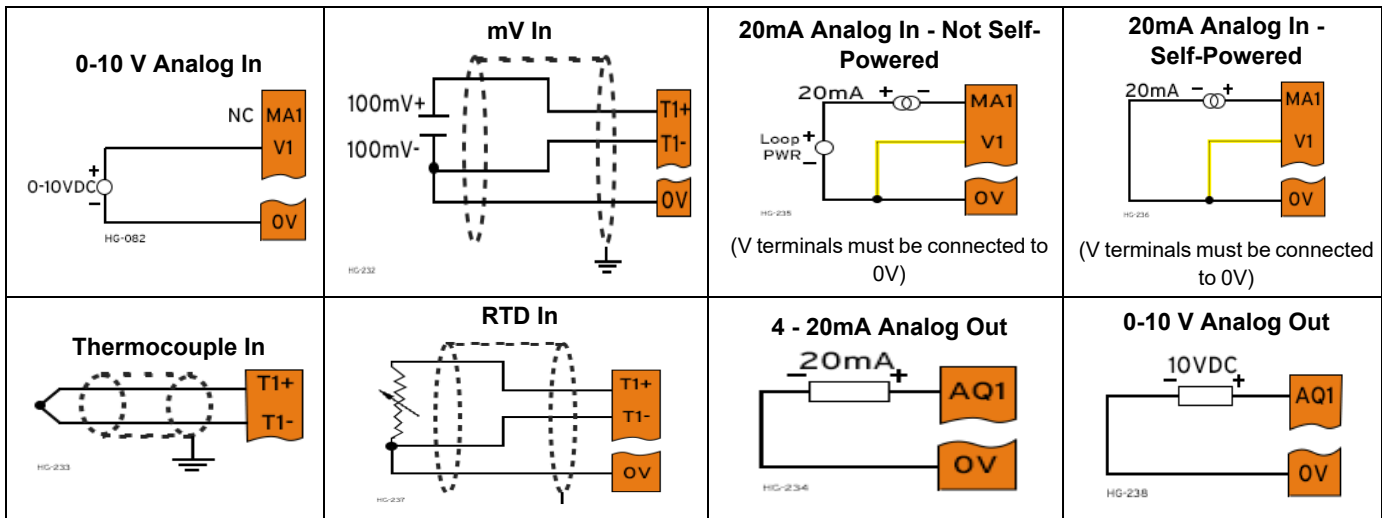

Wiring Details

Solid/Stranded Wire: 12-24 AWG (2.5-0.2mm²).

Strip Length: 0.28" (7mm).

Torque, Terminal Hold-Down Screws: 4.5 – 7 in•lbs (0.50 – 0.78 N•m).


Built-In I/O

The I/O is mapped into OCS Register space, in three separate areas: Digital/Analog I/O, High-Speed Counter I/O, and High-speed Output I/O. Digital/Analog I/O location is fixed starting at 1, but the high-speed counter and high-speed output references may be mapped to any open register location .

| Digital and Analog I/O Function Registers | |
|---|---------|
| Digital Inputs | %I1-12 |
| Reserved | %I13-31 |
| ESCP Alarm | %I32 |
| Digital Outputs | %Q1-12 |
| Reserved | %Q13-24 |
| Analog Inputs | %AI1-2 |
| Reserved | %AI3-12 |
| Analog Outputs | %AQ9-10 |
| Reserved | %AQ1-8 |

Analog Input Transient-Voltage-Suppression Diode Failure


A common cause of Analog Input Transient-Voltage-Suppression Diode Failure on Analog Inputs Model 2, 3, 4 & 5: If a 4- 20mA circuit is initially wired with loop power, but without a load, the analog input could see 24VDC. This is higher than the rating of the Transient-Voltage-Suppression Diode. This can be solved by NOT connecting loop power prior to load connection, or by installing a low-cost PTC in series between the load and analog input.

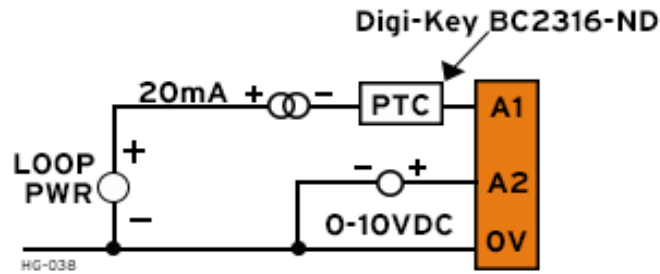


COMMUNICATIONS

Serial Communication

MJ1/2 Serial Ports

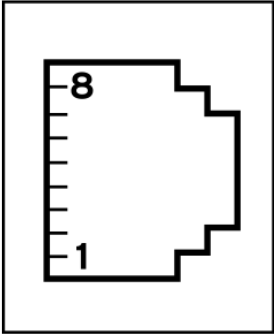
|  <p>HG-008</p> | <p>MJ1: RS-232 w/Full Handshaking MJ2: RS-485 Half-Duplex</p> | MJ1 Pins | | | MJ2 Pins | |
|---|--|----------|------------|-----------|------------|-----------|
| | | PIN | SIGNAL | DIRECTION | SIGNAL | DIRECTION |
| | | 8 | TXD | OUT | -- | -- |
| | | 7 | RXD | IN | -- | -- |
| | | 6 | 0V | COMMON | 0V | COMMON |
| | | 5 | +5V @ 60mA | OUT | +5V @ 60mA | OUT |
| | | 4 | RTS | OUT | -- | -- |
| | | 3 | CTS | IN | -- | -- |
| | | 2 | -- | -- | RX-/TX- | IN/OUT |
| | | 1 | -- | -- | RX+/TX+ | IN/OUT |

MJ3 Serial Port

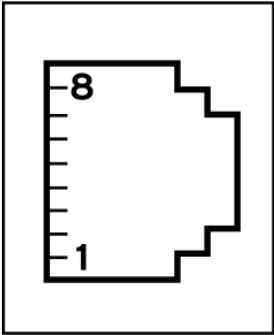
|  <p>HG-008</p> | <p>2 Multiplexed Serial Ports on One Modular Jack (8 position)</p> | MJ3 PINS | | |
|--|--|----------|------------|-----------|
| | | PIN | SIGNAL | DIRECTION |
| | | 8 | TXD RS-232 | OUT |
| | | 7 | RXD RS-232 | IN |
| | | 6 | 0V | COMMON |
| | | 5 | +5V @ 60mA | OUT |
| | | 4 | TX- RS-485 | OUT |
| | | 3 | TX+ RS-485 | OUT |
| | | 2 | RX- RS-485 | IN |
| | | 1 | RX+ RS-485 | IN |


NOTE: Attach optional [ferrite core](#) with a minimum of two turns of serial cable.

Ethernet

| | |
|---|---|
|  | <p>Green LED indicates link - when illuminated, data communication is available. Yellow LED indicates activity - when flashing, data is in transmission.</p> |
|---|---|


DIP Switches
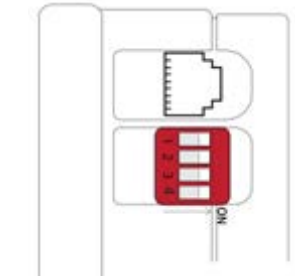
|  <p>HG-552</p> | DIP Switches | | | |
|---|--------------|------------------------|-----------------|---------|
| | SWITCH | NAME | FUNCTION | DEFAULT |
| | 1 | MJ3 RS-485 Termination | ON = Terminated | OFF |
| | 2 | MJ3 Duplex | Both ON = Half | OFF |
| | 3 | | Both OFF = Full | OFF |
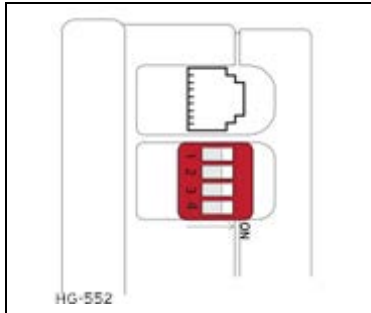
|  | DIP Switches | | |
|---|--------------|------------------------|------------------------|
| | 4 | MJ2 RS-485 Termination | ON = Terminated OFF |

The DIP switches are used to provide a built-in termination to both the MJ1, MJ2 & MJ3 ports if needed. The termination for these ports should only be used if this device is located at either end of the multidrop/ daisy-chained RS-485 network.

CAN Communications

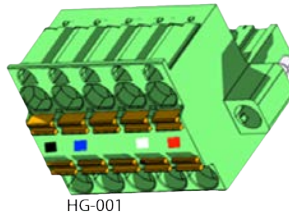


| CAN Network & Power Port Pin Assignment | | |
|---|---------|-----------------------|
| Pin | Signal | Signal Description |
| 1 | V- | CAN Ground – Black |
| 2 | CN_L | CAN Data Low – Blue |
| 3 | SHLD | Shield Ground – None |
| 4 | CN_H | CAN Data High – White |
| 5 | V+ (NC) | No Connect – Red |

- **Solid/Stranded Wire:** 12-24 AWG (2.5-0.2mm²).
- **Strip Length:** 0.28" (7mm).
- Locking spring-clamp, two-terminators per conductor.
- **Torque, Terminal Hold-Down Screws:** 4.5 – 7 in•lbs (0.50 – 0.78 N•m).
- V+ pin is not internally connected, the SHLD pin is connected to Earth ground via a 1MΩ resistor and 10 nF capacitor.

DIMENSIONS & INSTALLATION

Dimensions & Panel Cutout

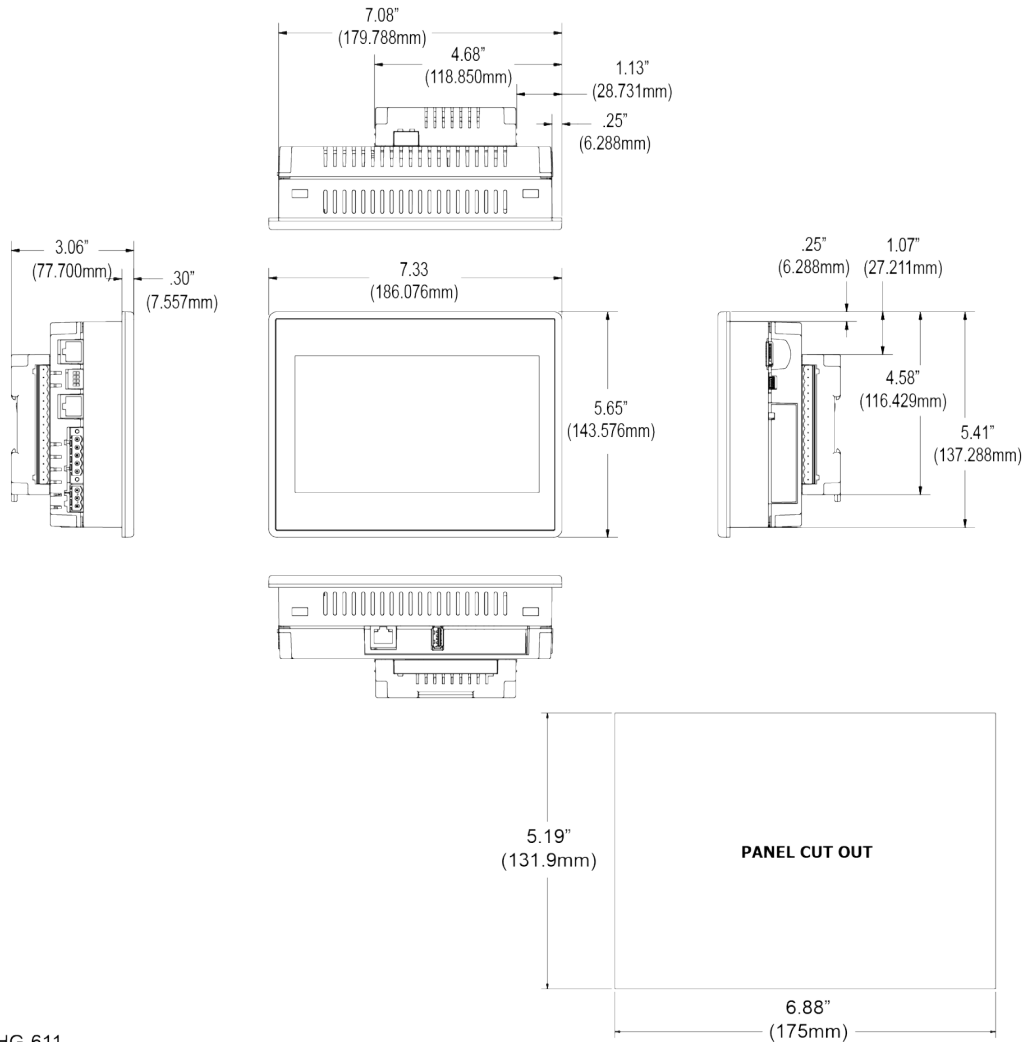

HG-611

+1.0 mm / -0 mm cutout tolerance

Installation Information

- The Canvas 7 utilizes a clip installation method to ensure a robust and watertight seal to the enclosure. Use the following steps for correct installation and operation of the unit.
- This equipment is suitable for Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.
- Digital outputs shall be supplied from the same source as the operator control station.
- Jumpers on connector JP1 shall not be removed or replaced while the circuit is live unless the area is known to be free of ignitable concentrations of flammable gases or vapors.

Installation Procedure

1. Carefully locate an appropriate place to mount the Canvas 7. Be sure to leave enough room at the top of the unit for insertion and removal of the microSD™ card.
2. Carefully cut the host panel per the diagram, creating a 131.9mm x 175.0mm, with a +1.0 mm / -0 mm panel cutout tolerance, opening into which the Canvas 7 may be installed. If the opening is too large, water may leak into the enclosure, potentially damaging the unit. If the opening is too small, the OCS may not fit through the hole without damage.
3. Remove any burrs and or sharp edges and ensure the panel is not warped in the cutting process.
4. Remove all Removable Terminals from the Canvas 7. Insert the Canvas 7 through the panel cutout (from the front). The gasket must be between the host panel and the OCS.
5. Install and tighten the four mounting clips (provided in the box) until the gasket forms a tight seal. **NOTE:** Maximum torque is 0.8 to 1.13N•m, or 7 to 10 in•lbs.
6. Reinstall the Canvas 7 I/O Removable Terminal Blocks. Connect communications cables to the serial port, USB ports, Ethernet port, and CAN port as required.

SAFETY & MAINTENANCE

Warnings

1. To avoid the risk of electric shock or burns, always connect the safety (or earth) ground before making any other connections.
2. To reduce the risk of fire, electrical shock, or physical injury, it is strongly recommended to fuse the voltage measurement inputs. Be sure to locate fuses as close to the source as possible.
3. Replace fuse with the same type and rating to provide protection against risk of fire and shock hazards.
4. In the event of repeated failure, do **NOT** replace the fuse again as repeated failure indicates a defective condition that will **NOT** clear by replacing the fuse.
5. Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate, or service this equipment.
6. Read and understand this manual and other applicable manuals in their entirety before proceeding. Failure to observe this precaution could result in severe bodily injury or loss of life.
7. **WARNING:** Battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire.
8. **WARNING:** EXPLOSION HAZARD- Batteries must only be changed in an area known to be non-hazardous.
9. **WARNING:** Do not disconnect while circuit is live unless area is known to be non-hazardous.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Precautions

All applicable codes and standards need to be followed in the installation of this product. Adhere to the following safety precautions whenever any type of connection is made to the module:

1. Connect the safety (earth) ground on the power connector first before making any other connections.
2. When connecting to the electric circuits or pulse-initiating equipment, open their related breakers.
3. Do NOT make connection to live power lines.
4. Make connections to the module first; then connect to the circuit to be monitored.
5. Route power wires in a safe manner in accordance with good practice and local codes.
6. Wear proper personal protective equipment including safety glasses and insulated gloves when making connections to power circuits.
7. Ensure hands, shoes, and floor are dry before making any connection to a power line.
8. Make sure the unit is turned OFF before making connections to terminals.
9. Make sure all circuits are de-energized before making connections.
10. Before each use, inspect all cables for breaks or cracks in the insulation. Replace immediately if defective.
11. Use copper conductors in field wiring only, 60/75°C.



- 12. Use caution when connecting controllers to PCs via serial or USB. PCs, especially laptops, may use “floating power supplies” that are ungrounded. This could cause a damaging voltage potential between the laptop and controller. Ensure the controller and laptop are grounded for maximum protection. Consider using a USB isolator due to voltage potential differences as a preventative measure.

Technical Support

| North America | Europe |
|--|--|
| 1 (317) 916-4274 1 (877) 665-5666 www.hornerautomation.com APGUSATechSupport@heapg.com | +353 (21) 4321-266 www.hornerautomation.eu technical.support@horner-apg.com |