

Canvas 7D Datasheet - Model 6

12 DC In, 12 DC Out, 17-bit Analog In (mA/V/Tc/mV/RTD),

4 – 12-bit Analog Out

MAN1392_03_EN_CV7D_Mod6



Part Number: HE-CV-070D-06

User Manual and Add-Ons

Find the documents via the [Documentation Search](#).

| Part # | Description |
|-------------|---|
| MAN1383 | Canvas 7D User Manual |
| HE-XCK | Programming Cables |
| HE-PRGA2C | Type A USB to Type C USB Programming Cable |
| HE-PRGC2C | Type C USB to Type C USB Programming Cable |
| HE-XDAC | 2 channel Analog Output I/O option kit, selectable 0-10V, $\pm 10V$, 4-20mA. |
| HE-XDAC107 | 4 channel Analog Output I/O option kit, selectable 0-10V, $\pm 10V$, 4-20mA. |
| HE-XKIT | Blank I/O Board |
| HE200MJ2TRM | Adapter, RJ45 (8P8C) male to 8-position terminal strip. |
| HE-FBD001 | Ferrite core for filtering out electrical noise. |

Battery Maintenance

The Canvas 7D OCS uses a Renata CR2032 lithium battery to run the Real Time Clock. The battery life is 7-10 years.

For more information, see **MAN1383**.

Table of Contents

| | |
|--|-----------|
| Part Number: HE-CV-070D-06 | 1 |
| User Manual and Add-Ons | 1 |
| Battery Maintenance | 1 |
| TECHNICAL SPECIFICATIONS | 2 |
| General Specifications | 2 |
| Backlight | 2 |
| Control and Logic | 3 |
| User Interface | 3 |
| Connectivity | 4 |
| CONTROLLER OVERVIEW | 5 |
| Overview of OCS | 5 |
| Power Wiring | 6 |
| MODEL 6 SPECIFICATIONS | 7 |
| Digital DC Input | 7 |
| Digital DC Outputs | 7 |
| Analog Inputs | 8 |
| Analog Outputs | 9 |
| WIRING: INPUTS AND OUTPUTS | 10 |
| Analog Inputs Information | 10 |
| Digital Inputs Information | 10 |
| Positive Logic vs. Negative Logic | 10 |
| Connector Overview | 10 |
| J1 and J2 Wiring | 11 |
| J3 Wiring | 13 |
| Status Registers | 15 |
| Registers | 16 |
| COMMUNICATIONS | 17 |
| Serial Communication | 17 |
| Ethernet | 17 |
| DIP Switches | 18 |
| CAN Communications | 18 |
| DIMENSIONS & INSTALLATION | 19 |
| Installation Information | 19 |
| Installation Procedure | 20 |
| SAFETY & MAINTENANCE | 21 |
| Warnings | 21 |
| FCC Compliance | 21 |
| Precautions | 21 |

TECHNICAL SPECIFICATIONS

General Specifications

| | |
|-------------------------|---|
| Required Power (Inrush) | 25A for < 1ms @ 24VDC |
| Heater Option* | Add 250mA with heater* (24VDC) |
| Primary Power Range | 10 - 30VDC |
| Maximum Current | 1100mA, Class 2 |
| Relative Humidity | 5 to 95%, Non-Condensing |
| Clock Accuracy | ± 20 ppm maximum at 25°C, (± 1 min/month) |
| Real Time Clock | Battery Backed, Lithium Coin |
| Operating Temperature | -10°C to +60°C -40°C to +60°C (with heater*) |
| Storage Temperature | -20°C to +60°C |
| Weight | 1.59 lbs (721.2g) |
| Altitude | Up to 2000m |
| Pollution Degree | Degree 2 Rating |
| Certification (UL/CE) | North America or Europe |
| Enclosure Type | 1, 3R, 4, 4X, 12, 12K & 13 |

*Heater Option (Model # plus "-22")

Backlight

| | |
|------------------------------|--|
| Typical Power Backlight 100% | 803mA @ 10VDC (8.03W) 370mA @ 24VDC (8.87W) |
| Backlight 50% | 707mA @ 10VDC (7.07W) 326mA @ 24VDC (7.81W) |
| Backlight Off | 625mA @ 10VDC (6.25W) 287mA @ 24VDC (6.89W) |

Control and Logic

| | |
|---------------------------|---|
| Control Language Support | Register-Based Advanced Ladder Logic; Variable-Based Advanced Ladder Logic IEC 61131-3 Languages |
| Logic Program Size | 2MB, maximum |
| Scan Rate | 0.02ms/kB |
| Digital Inputs | 2048 |
| Digital Outputs | 2048 |
| Analog Inputs | 512 |
| Analog Outputs | 512 |
| General Purpose Registers | 50,000 (words) Retentive 16,384 (bits) Retentive 16,384 (bits) Non-retentive |

USB Webcams

USB Webcams supported should support the UVC (USB Video class) protocol for the OCS to be able to display video. Most USB based video devices support this today. Special features such as zoom and high definition are not supported by the OCS.

User Interface

| | |
|---------------------------|--|
| Display Type | 7" TFT Color |
| Screen Brightness | 800cd/m ² (nits) |
| Resolution | QVGA (800 x 480) |
| Color | 16-bit (65,535) |
| Screen Memory | 17MB |
| User-Programmable Screens | 1023 maximum pages; 1023 objects per page |
| Backlight | LED - 50,000 hour life |
| Brightness Control | 0-100% via System Register %SR57 |
| Number of Keys | 6 |

Connectivity

| | |
|--------------------------|---|
| Serial Ports | 1 RS-232 & 1 RS-485 on first Modular Jack (MJ1/2); 1 RS-232 or 1 RS-485 on second Modular Jack (MJ3) |
| USB A (500mA max) | USB 2.0 (480 Mbps) for USB flash drives (2TB) |
| CAN Port Isolated 1kV | 2 x Remote I/O, Peer-to-peer Comms, Cscape |
| CAN Protocols | CsCAN, CANopen, DeviceNet, J1939 |
| Ethernet | 2 x 10/100 Mb (Auto-MDX) |
| Ethernet Protocols | TCP/IP, Modbus TCP, FTP, SMTP, EGD, ICMP, ASCII, Cscape, Ethernet IP |
| Remote I/O | OCS-I/O |
| Removable Memory | microSD, SDHC, SDXC (in FAT32 format), support for 32GB maximum. Application Updates, Datalogging |
| Audio | |

UV and Sunlight Protection

Protection of this product from direct sunlight is recommended but not required. The overlay is made of an overlay which is designed to be UV resistant. Protection will further extend the life of the overlay and touchscreen.

CONTROLLER OVERVIEW

Overview of OCS

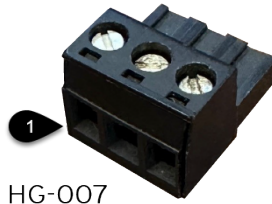


HG-1315

- | | |
|---------------------------------------|--|
| 1. Touchscreen | 8. LAN 1&2 Ports |
| 2. Function Keys | 9. Audio Out Port |
| 3. MJ1: RS232 / MJ2: 1/2 Duplex RS485 | 10. USB 2.0 "A": Flash Drive |
| 4. DIP Switches | 11. OCS-I/O Expansion (This port is reserved for future functionality.) |
| 5. MJ3: RS-232/485 Serial Port | 12. CAN2 Port |
| 6. CAN1 Port | 13. Bootloader Mode Switch |
| 7. PWR: 10-30VDC In | 14. USB C: Programming |
| | 15. microSD: Data Storage |

Power Wiring

NOTE: The Primary Power Range is 10VDC to 30VDC.



HG-007

| Primary Power Port Pins | | |
|-------------------------|--------|----------------------------|
| PIN | Signal | Description |
| 1 | Ground | Frame Ground |
| 2 | DC- | Input Power Supply Ground |
| 3 | DC+ | Input Power Supply Voltage |

DC Input / Frame

- Solid/Stranded Wire: 12-24 AWG(2.5-0.2 mm²)
- Strip length: 0.28" (7mm)
- Torque, Terminal Hold-Down Screws: 4.5 – 7 in•lbs (0.50 – 0.78 N•m)
- DC- is internally connected to I/O V-, but is isolated from CAN V-. A Class 2 power supply must be used.

Power Up

1. **OPTION:** Attach ferrite core with a minimum of two turns of the DC+ and DC- signals from the DC supply that is powering the controllers.



HG-006

2. Connect to earth ground.
3. Apply recommended power.

MODEL 6 SPECIFICATIONS

Digital DC Input

| | | |
|--------------------------------------|--|----------------|
| Inputs per Module | 12 Including 4 Configurable HSC Inputs | |
| Commons per Module | 1 | |
| Input Voltage Range | 12VDC/24VDC | |
| Absolute Maximum Voltage | 30VDC | |
| Input Impedance | 10kΩ | |
| Input Current | Positive Logic | Negative Logic |
| Upper Threshold | 0.8mA | -1.6mA |
| Lower Threshold | 0.3mA | -2.1mA |
| Maximum Upper Threshold | 8VDC | |
| Minimum Lower Threshold | 3VDC | |
| OFF to ON Response | 1ms | |
| ON to OFF Response | 1ms | |
| Galvanic Isolation | None | |
| Logic Polarity | Selectable in Cscope | |
| I/O Indication | None | |
| Connector Type | 3.5mm Pluggable Cage Clamp Connector | |
| High Speed Counter Maximum Frequency | 1MHz (Quadrature Frequency 500kHz) | |

Digital DC Outputs

| | | |
|---------------------------------------|--|--|
| Outputs per Module | 12 Including 2 Configurable PWM Outputs | |
| Commons per Module | 1 | |
| Output Type | Sourcing/10kΩ Pull-Down | |
| Output Frequency | 500kHz (up to 500kHz when using the HE-XHSQ add-on module) | |
| Absolute Maximum Voltage | 28VDC | |
| Output Protection | Short Circuit | |
| Maximum Output Current/Point | 0.5A | |
| Maximum Total Current | 4A Continuous | |
| Maximum Output Supply Voltage | 30VDC | |
| Minimum Output Supply Voltage | 10VDC | |
| Maximum Voltage Drop at Rated Current | 0.25VDC | |
| Maximum Inrush Current | 650mA per Channel | |
| Minimum Load | None | |
| OFF to ON Response | 1ms | |
| ON to OFF Response | 1ms | |
| Output Characteristics | Current Sourcing (Positive Logic) | |
| Rise Time | 50 - 115μs | |
| Fall Time | 8-20μs | |

Analog Inputs

| | |
|---|---|
| Number of Channels | 6 |
| Input Ranges (Selectable) | 0-20mA; 4-20mA DC; 0-60mV; 0-10VDC; T/C (Ungrounded): J, K, N, T, E, R, S, B RTD: PT100, PT1000 |
| %AI Full Scale | 0-10V, 0- 20mA, 0- 100mV: 32,000 counts full scale RTD/TC: 10 counts/ °C |
| Nominal Resolution | 17 Bits |
| Absolute Maximum Input Voltage | -0.5 to -12VDC (± 30VDC) |
| Input Impedance (Clamped @ -0.5 to 10.23VDC) | T/C/RTD/ mV > 2MΩ mA: 15Ω + 1.5V / V: 1.1MΩ |
| Max Over Current | 35mA |
| Galvanic Isolation | None |
| Conversion Speed | Minimum All Channels Converted in app. < 250ms or 41ms per channel enable |

| Sensor Range and Accuracy | Input Type: | Range: | Accuracy: |
|---------------------------|----------------------|---|----------------------------|
| | TC J (Ungrounded) | -120 to 1000°C / -184 to 1832°F | ± 0.2% of full scale ± 1°C |
| | TC K (Ungrounded) | -130 to 1372°C / -202 to 2501.6°F | ± 0.2% of full scale ± 1°C |
| | TC T (Ungrounded) | -130 to 400°C / -202 to 752°F | ± 0.2% of full scale ± 1°C |
| | TC E (Ungrounded) | -130 to 780°C / -202 to 1436°F | ± 0.2% of full scale ± 1°C |
| | TC N (Ungrounded) | -130 to 1300°C / -202 to 2372°F | ± 0.2% of full scale ± 1°C |
| | TC R, S (Ungrounded) | 20 to 1768°C / 68 to 3214.4°F | ± 0.2% of full scale ± 3°C |
| | TC B (Ungrounded) | 500 to 1820°C / 212 to 3308°F Functions below 500°C with reduced accuracy. | ± 0.2% of full scale ± 3°C |
| | PT100/1000 | -200 to 850°C / -328 to 1562°F | ± 0.15% of full scale |
| | 0-20mA | 0-20mA | ± 0.15% of full scale |
| | 0-60mV | 0-60mV | ± 0.15% of full scale |
| | 0-10V | 0-10V | ± 0.15% of full scale |

The filter on the Model 6 board is based on the following equation:

$$Y = Y_{n-1} + ((Y_{n-1} - X_n) / FV)$$

Where Y is the new filter output Value, Y_{n-1} is the previous value, X is the new value just sampled and FV is the filter value. From the equation it can be seen that the larger the filter value (range 0-20) is, the smaller the portion of the new value is added to the previous value and the longer it takes to converge on the final value. A filter Value of 0 means no filter and the full new sample is used. Valid filter values are 0-20.

Analog Outputs

| | |
|--|--|
| Number of Channels | 4 |
| Output Ranges | 0-10VDC, 0-20mA, 4-20mA |
| Nominal Resolution | 12 Bits |
| Maximum Error at 25°C (Excluding Zero) | 0-20mA: 0.1% of full scale 0-10V: 0.1 % of full scale |
| Maximum Loop Voltage | 27V |
| Response Time | One Update per program logic scan |
| Minimum Resistance Load | Models 0, 2-5: 500Ω Model 6: 400Ω |
| Conversion Speed | Minimum All Channels Once per Scan |
| Galvanic Isolation | None |
| Temperature Drift Error | 20mA: 0.000143%/°C 0 - 10V: 0.000151%/°C |

WIRING: INPUTS AND OUTPUTS

Analog Inputs Information

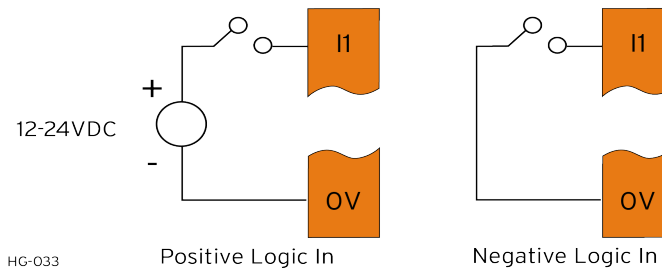
Raw input values for channels 1-4 are found in the registers as Integer-type data with a range from 0 – 32000. Analog inputs may be filtered digitally with the Filter Constant found in the Cscape Hardware Configuration for Analog Inputs. Valid filter values are 0-15.

| Data Values | |
|----------------|--|
| Input Mode: | Data Format, 12-bit INT |
| 0-20mA, 4-20mA | 0-32000 |
| 0-10V | 0-32000 |
| T/C & RTD | Temperature units are selected in the Cscape Hardware Configuration between °C and °F. Temperature = Raw Value / 10 |

Digital Inputs Information

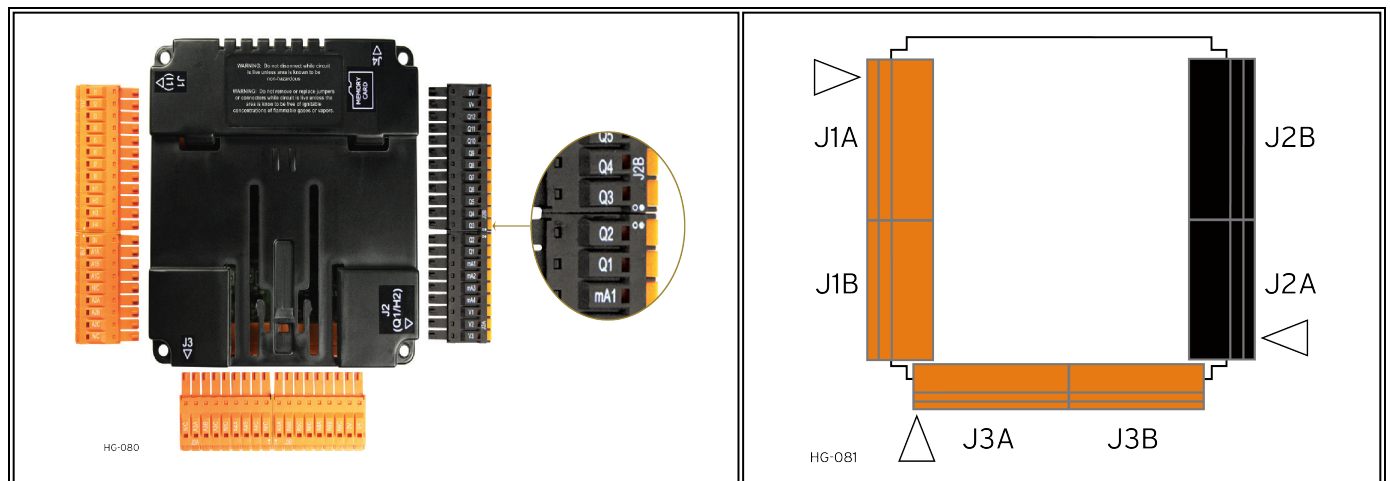
Positive Logic vs. Negative Logic

The OCS can be wired for positive logic inputs or negative.



Digital inputs may be wired in either a Positive Logic or Negative Logic fashion as shown. The setting in the Cscape Hardware Configuration for the Digital Inputs must match the wiring used in order for the correct input states to be registered. When used as a normal input and not for high speed functions, the state of the input is reflected in registers %I1 – %I12. Digital inputs may alternately be specified for use with High Speed Counter functions, also found in the Hardware Configuration for Digital Inputs. Refer to the User Manual via the [Documentation Search](#) for more details.

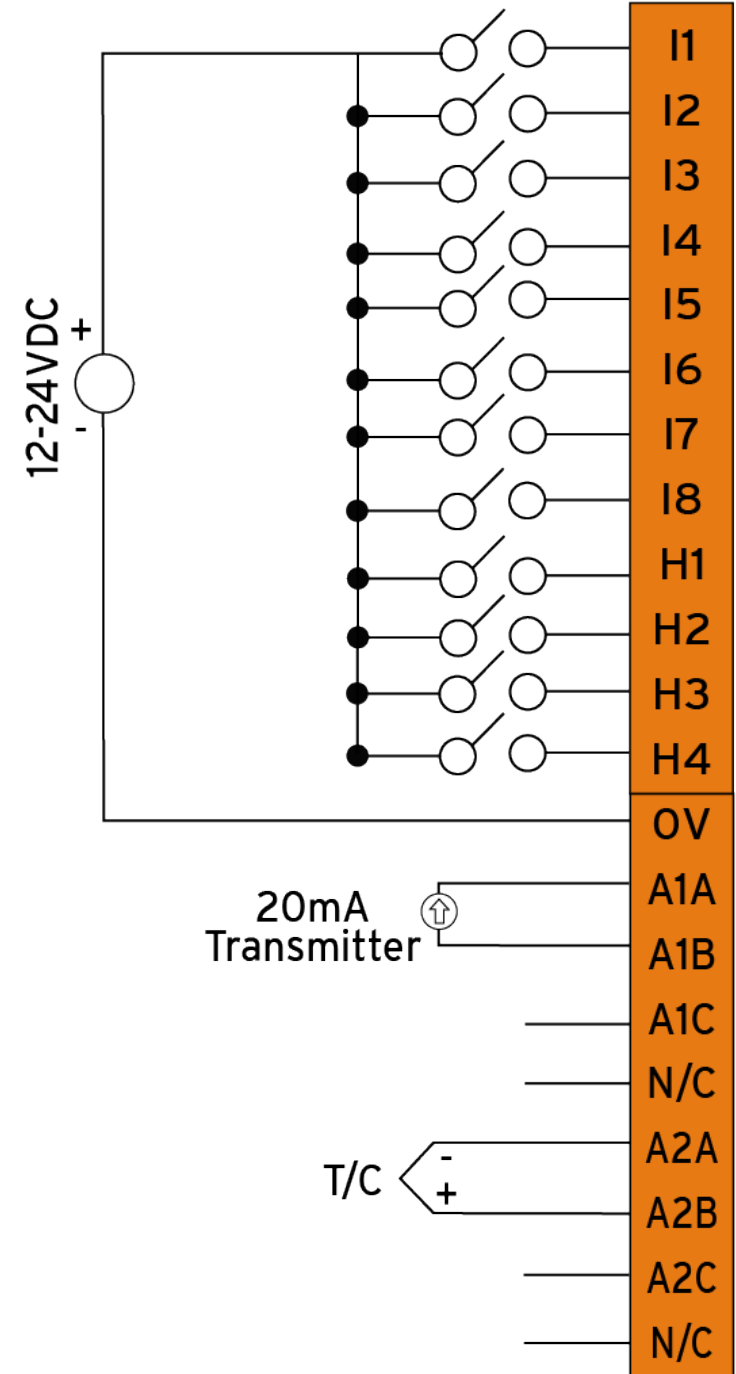
Connector Overview



For ease of operability, the high density terminals are divided into more manageable pairs of connectors (J1A + J1B, J2A + J2B, J3A + J3B). To ensure proper installation, connector symbols must match.

J1 and J2 Wiring

| J1 Wiring | | |
|------------------------|------------|----------------------|
| J1 (Orange/Green) Name | | |
| J1A | I1 (%I1) | Digital In 1 |
| | I2 (%I2) | Digital In 2 |
| | I3 (%I3) | Digital In 3 |
| | I4 (%I4) | Digital In 4 |
| | I5 (%I5) | Digital In 5 |
| | I6 (%I6) | Digital In 6 |
| | I7 (%I7) | Digital In 7 |
| | I8 (%I8) | Digital In 8 |
| | H1 (%I9) | HSC1/ Digital In 9 |
| | H2 (%I10) | HSC2/ Digital In 10 |
| | H3 (%I11) | HSC3/ Digital In 11 |
| | H4 (%I12) | HSC4/ Digital In 12 |
| | J1B | 0V |
| A1A (%AI33) | | Universal AI 1 Pin 1 |
| A1B (%AI33) | | Universal AI 1 Pin 2 |
| A1C (%AI33) | | Universal AI 1 Pin 3 |
| NC | | No Connect |
| A2A (%AI34) | | Universal AI 2 Pin 1 |
| A2B (%AI34) | | Universal AI 2 Pin 2 |
| A2C (%AI34) | | Universal AI 2 Pin 3 |
| NC | | No Connect |



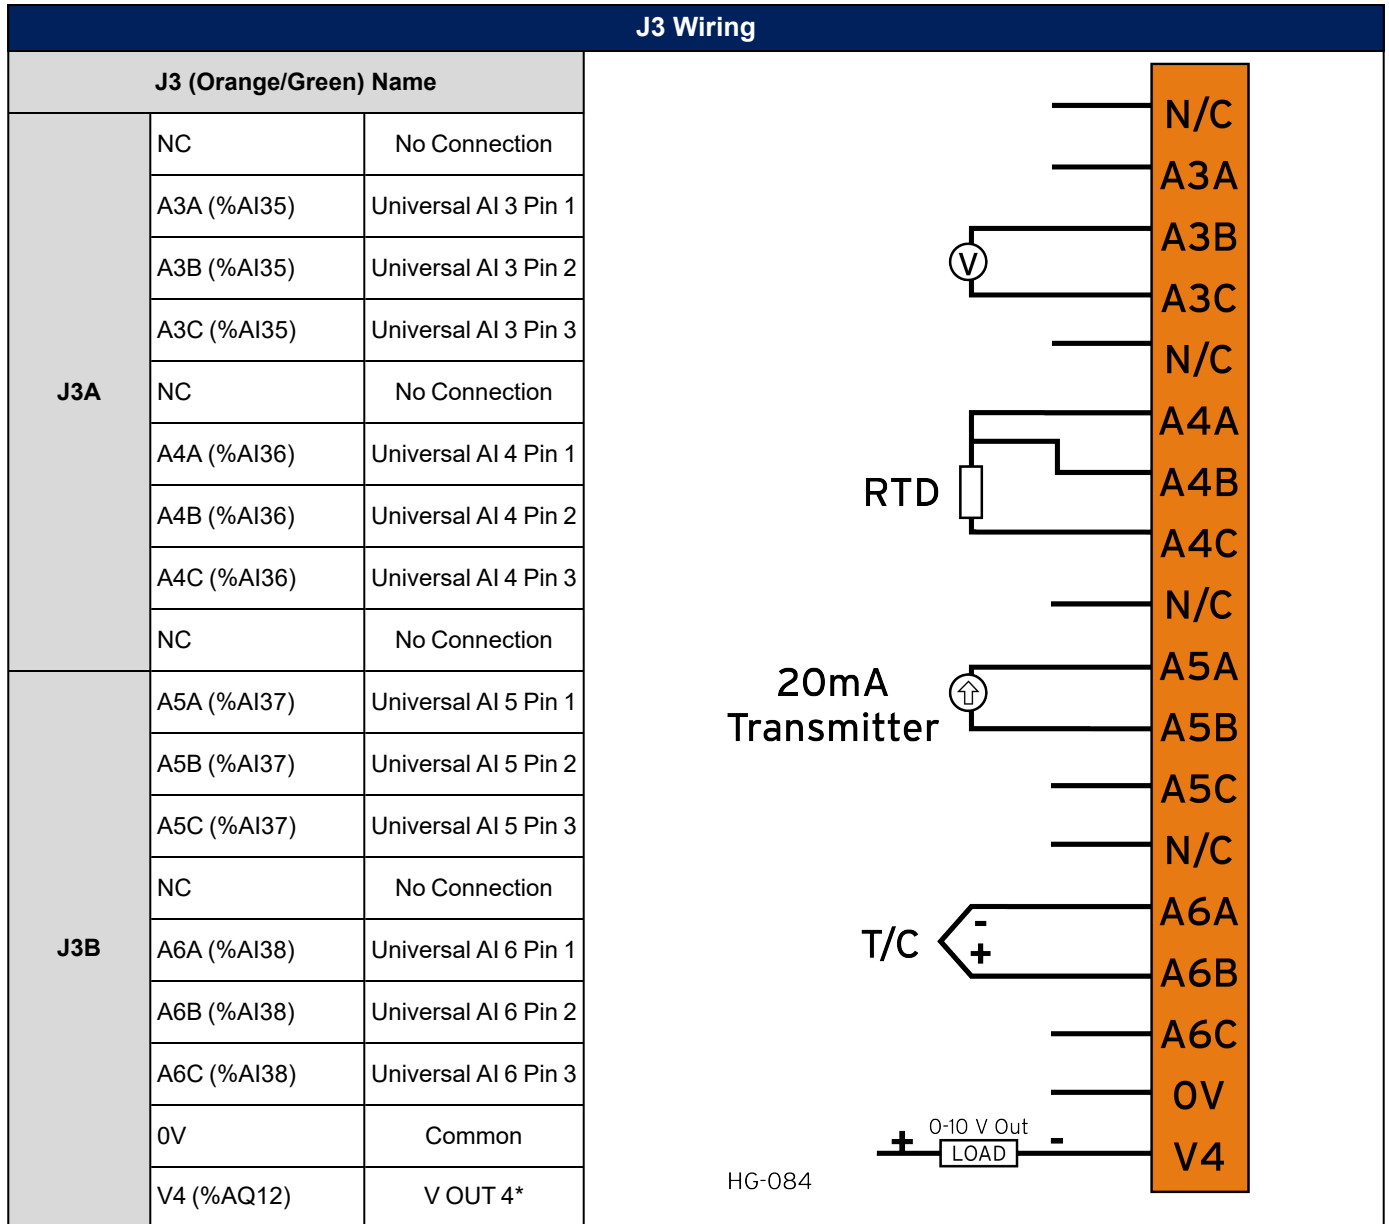
12-24VDC

20mA Transmitter

T/C

HG-086

J3 Wiring



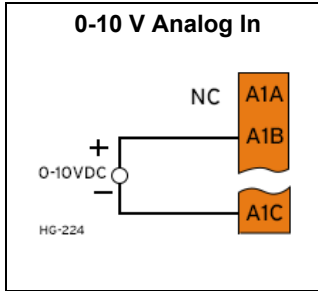
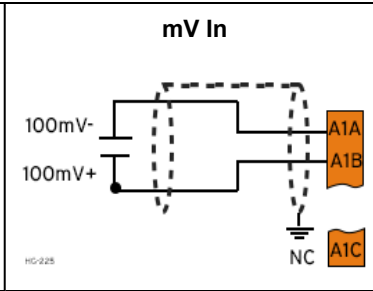
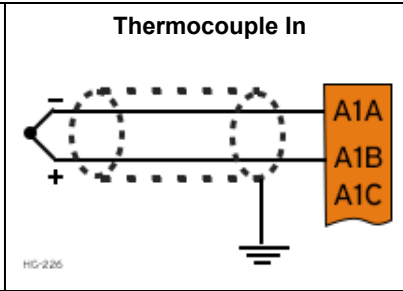
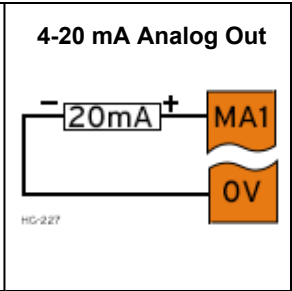
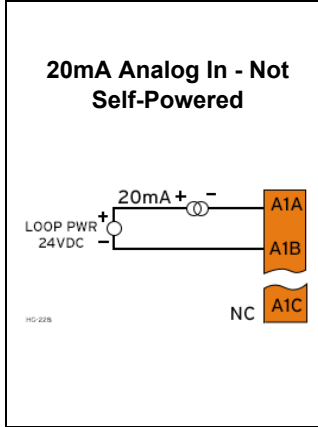
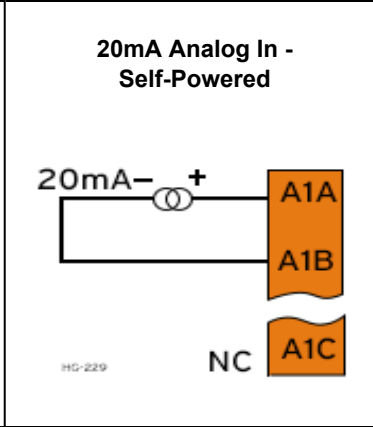
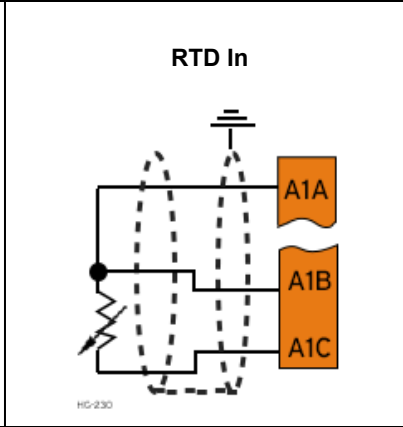
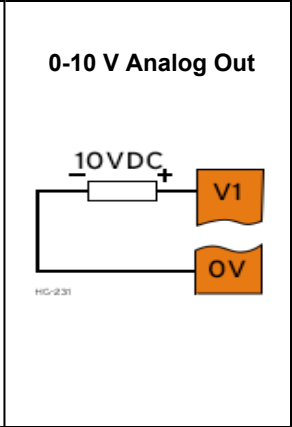
NOTE: * Both mA & V outputs are active for each output channel, however, only the configured output type is calibrated (maximum 4 channels simultaneously).

J3 Universal Wiring & Wiring Details

Solid/Stranded Wire: 12-24 AWG (2.5-0.2mm²)

Strip Length: 0.28" (7mm)

Torque, Terminal Hold-Down Screws: 4.5 - 7 in•lbs (0.50 - 0.78 N•m)

| | | | |
|--|--|--|--|
| <p>0-10 V Analog In</p>  | <p>mV In</p>  | <p>Thermocouple In</p>  | <p>4-20 mA Analog Out</p>  |
| <p>20mA Analog In - Not Self-Powered</p>  | <p>20mA Analog In - Self-Powered</p>  | <p>RTD In</p>  | <p>0-10 V Analog Out</p>  |

Status Registers

| Selectable Register | Description | | | | | | | |
|---------------------|---|---------------|----------------|-------------|------------------|---------------|----------------|-------------|
| %Rx* | Bit-wise status register enable: Set %Rx.1 - %Rx.9 high to enable for registers %R(x+1) to %R(x+9). | | | | | | | |
| %R(x+1) | Firmware version | | | | | | | |
| %R(x+2) | Watchdog count - cleared on power-up. | | | | | | | |
| %R(x+3) | Status Bits: | | | | 16...4 | 3 | 2 | 1 |
| | | | | | Reserved | Normal | Config | Calibration |
| %R(x+4) | Scan rate of the 106 board (average) in units of 100 μ s. | | | | | | | |
| %R(x+5) | Scan rate of the 106 board (max) in units of 100 μ s. | | | | | | | |
| %R(x+6) | Channel Status: Channel 2 | | | | Channel 1 | | | |
| | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| | Open TC/RTD | Out of Limits | Shorted TC/RTD | Open Sensor | Open TC/RTD | Out of Limits | Shorted TC/RTD | Open Sensor |
| %R(x+7) | Channel Status: Channel 4 | | | | Channel 3 | | | |
| | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| | Open TC/RTD | Out of Limits | Shorted TC/RTD | Open Sensor | Open TC/RTD | Out of Limits | Shorted TC/RTD | Open Sensor |
| %R(x+8) | Channel Status: Channel 6 | | | | Channel 5 | | | |
| | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| | Open TC/RTD | Out of Limits | Shorted TC/RTD | Open Sensor | Open TC/RTD | Out of Limits | Shorted TC/RTD | Open Sensor |
| %R(x+9...14) | Reserved | | | | | | | |

*Example: %Rx= %R500, %R(x+1) = %R501, %R(x+2) = %R502, ...

Registers

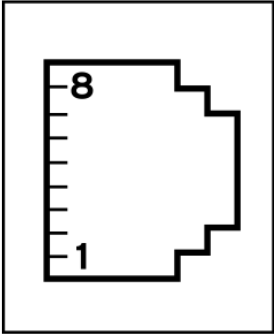
The I/O is mapped into OCS Register space, in three separate areas: Digital/Analog I/O, High-Speed Counter I/O, and High-Speed Output I/O. Digital/Analog I/O location is fixed starting at 1, but the high-speed counter and high-speed output references may be mapped to any open register location.

| Digital and Analog I/O Functions Registers | |
|--|----------|
| Digital Inputs | %I1-12 |
| Reserved | %I13-31 |
| ESCP Alarm | %I32 |
| Digital Outputs | %Q1-12 |
| Reserved | %Q13-24 |
| Analog Inputs | %AI33-38 |
| Reserved | %AI1-32 |
| Analog Outputs | %AQ9-12 |
| Reserved | %AQ1-8 |

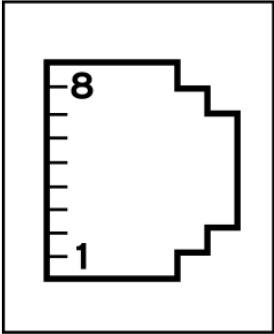
COMMUNICATIONS

Serial Communication

MJ1/2 Serial Ports

|  <p>HG-008</p> | <p>MJ1: RS-232 w/Full Handshaking MJ2: RS-485 Half-Duplex</p> | MJ1 Pins | | | MJ2 Pins | |
|---|--|----------|------------|-----------|------------|-----------|
| | | PIN | SIGNAL | DIRECTION | SIGNAL | DIRECTION |
| | | 8 | TXD | OUT | -- | -- |
| | | 7 | RXD | IN | -- | -- |
| | | 6 | 0V | COMMON | 0V | COMMON |
| | | 5 | +5V @ 60mA | OUT | +5V @ 60mA | OUT |
| | | 4 | RTS | OUT | -- | -- |
| | | 3 | CTS | IN | -- | -- |
| | | 2 | -- | -- | RX-/TX- | IN/OUT |
| | | 1 | -- | -- | RX+/TX+ | IN/OUT |

MJ3 Serial Port

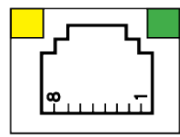
|  <p>HG-008</p> | <p>2 Multiplexed Serial Ports on One Modular Jack (8 position)</p> | MJ3 PINS | | |
|--|--|----------|------------|-----------|
| | | PIN | SIGNAL | DIRECTION |
| | | 8 | TXD RS-232 | OUT |
| | | 7 | RXD RS-232 | IN |
| | | 6 | 0V | COMMON |
| | | 5 | +5V @ 60mA | OUT |
| | | 4 | TX- RS-485 | OUT |
| | | 3 | TX+ RS-485 | OUT |
| | | 2 | RX- RS-485 | IN |
| | | 1 | RX+ RS-485 | IN |

NOTE: Attach optional [ferrite core](#) with a minimum of two turns of serial cable.

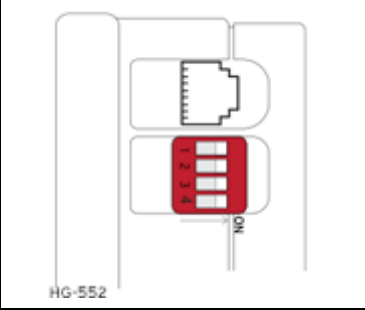
Ethernet

Two 10/100 Ethernet ports with automatic MDI-X (crossover detection) are provided using the dual 8-position modular jack labeled LAN0 and LAN1. Additional features are available for use over Ethernet, including WebMI, Modbus TCP/IP, EthernetIP, SMTP (E-mail), expansion I/O to SmartRail, and more.

Ethernet configuration is done using the Cscape Hardware Configuration. For more information on Ethernet, available features, and protocols, refer to the Ethernet Supplement document (SUP0740).

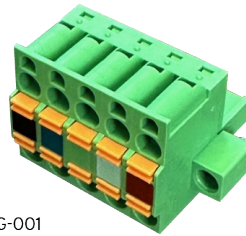
| | |
|---|---|
|  <p>HG-041</p> | <p>Green LED indicates link - when illuminated, data communication is available. Yellow LED indicates activity - when flashing, data is in transmission.</p> |
|---|---|

DIP Switches

|  | DIP Switches | | | |
|---|------------------------|-----------------|----------|---------|
| | SWITCH | NAME | FUNCTION | DEFAULT |
| 1 | MJ3 RS-485 Termination | ON = Terminated | OFF | |
| 2 | MJ3 Duplex | Both ON = Half | OFF | |
| 3 | | Both OFF = Full | OFF | |
| 4 | MJ2 RS-485 Termination | ON = Terminated | OFF | |

The DIP switches are used to provide a built-in termination to both the MJ1, MJ2 & MJ3 ports if needed. The termination for these ports should only be used if this device is located at either end of the multidrop/ daisy-chained RS-485 network.

CAN Communications

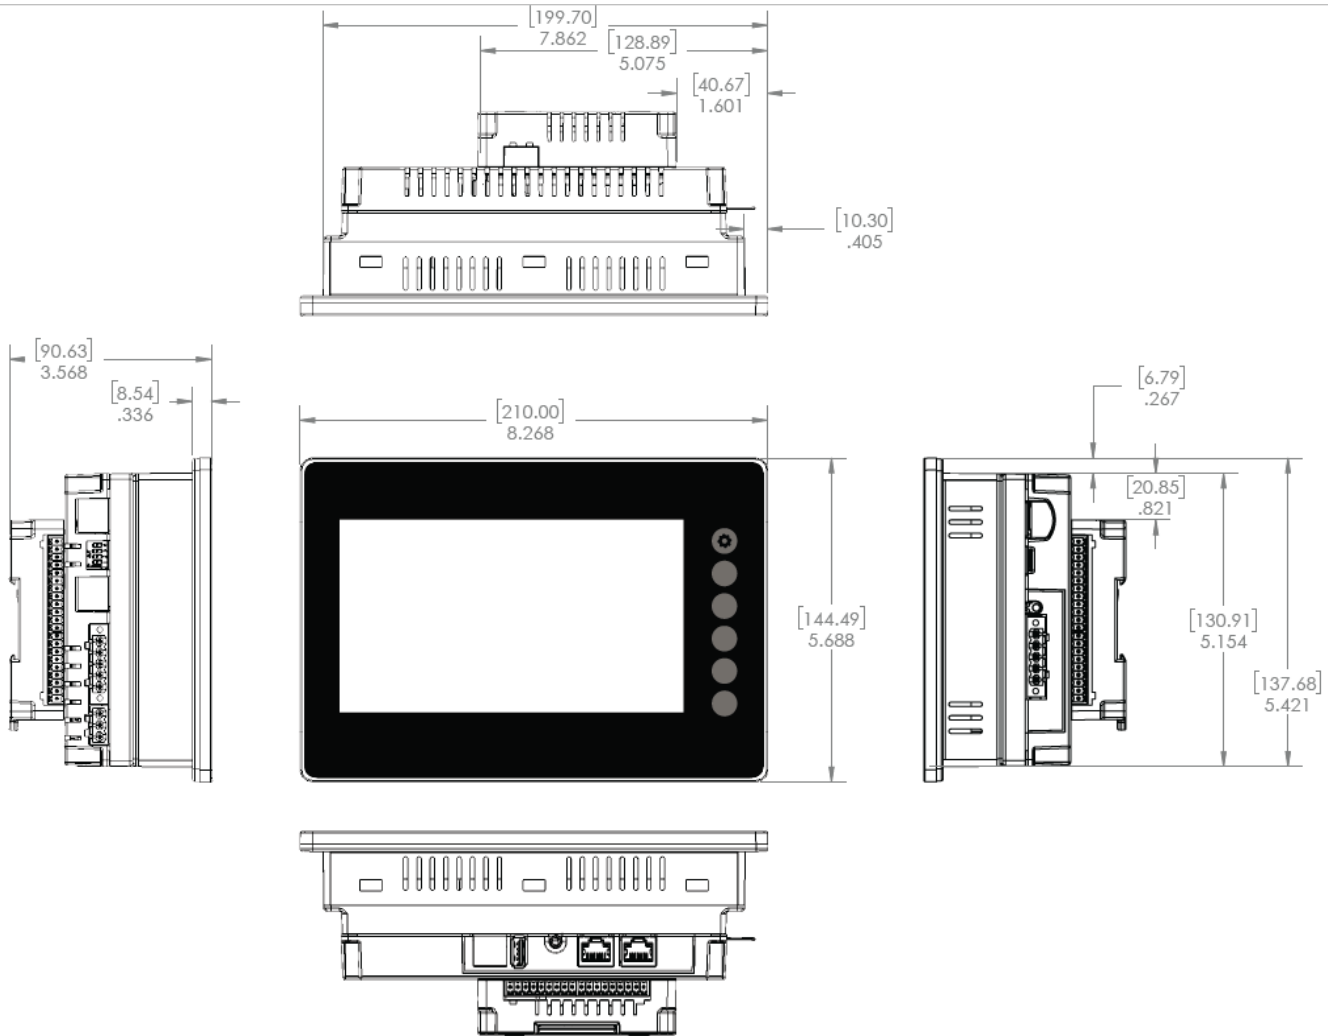


HG-001

| CAN Network & Power Port Pin Assignment | | |
|---|---------|-----------------------|
| Pin | Signal | Signal Description |
| 1 | V- | CAN Ground – Black |
| 2 | CN_L | CAN Data Low – Blue |
| 3 | SHLD | Shield Ground – None |
| 4 | CN_H | CAN Data High – White |
| 5 | V+ (NC) | No Connect – Red |

- **Solid/Stranded Wire:** 12-24 AWG(2.5-0.2mm²).
(Specifically recommended: 3084A or 3084B for best performance.)
- **Strip Length:** 0.28" (7mm).
- Locking spring-clamp, two-terminators per conductor.
- **Torque, Terminal Hold-Down Screws:** 4.5 – 7 in•lbs (0.50 – 0.78 N•m).
- V+ pin is not internally connected, the SHLD pin is connected to Earth ground via a 1M Ω resistor and 10 nF capacitor. CAN_SHLD is single-ended, so it should only be connected either to the OCS or the target device.

DIMENSIONS & INSTALLATION



Installation Information

- The Canvas 7D utilizes a clip installation method to ensure a robust and watertight seal to the enclosure. Please follow the steps below for the proper installation and operation of the unit.
- This equipment is suitable for Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.
- Digital outputs shall be supplied from the same source as the operator control station.
- Jumpers on connector JP1 shall not be removed or replaced while the circuit is live unless the area is known to be free of ignitable concentrations of flammable gases or vapors.
- **WARNING-** The USB ports are for operational maintenance only. Do not leave permanently connected unless area is known to be non-hazardous.

Installation Procedure

The Canvas 7D OCS utilizes a clip installation method to ensure a robust and watertight seal to the enclosure. Please follow the steps below for the installation and operation of the unit.

1. Carefully locate a place to mount the Canvas OCS. Be sure to leave enough room at the top of the unit for insertion and removal of the microSD™ card.
2. Carefully cut the host panel per the diagram, creating a 131.2mm x 189.7mm with a +1.6 mm /-0 mm panel cutout tolerance, opening into which the OCS may be installed. **Note:** If the opening is too large, water may leak into the enclosure, potentially damaging the unit. If the opening is too small, the OCS may not fit through the hole without damage.
3. Remove any burrs and or sharp edges and ensure the panel is not warped in the cutting process.
4. Remove all Removable Terminals from the OCS. Insert the OCS through the panel cutout (from the front). The gasket must be between the host panel and the OCS.
5. Install and tighten the four mounting clips (provided in the box) until the gasket forms a tight seal .
 - Maximum torque is 0.8 to 1.13N•m or 7 to 10 in•lbs.
 - Revision 1BB or later hardware should be torqued to 4-7 in•lbs (0.45N•m - 0.79N•m)
6. Reinstall the I/O Removable Terminal Blocks. Connect communications cables to the serial port, USB ports, Ethernet port, and CAN port as required.

SAFETY & MAINTENANCE

Warnings

1. To avoid the risk of electric shock or burns, always connect the safety (or earth) ground before making any other connections.
2. To reduce the risk of fire, electrical shock, or physical injury, it is strongly recommended to fuse the voltage measurement inputs. Be sure to locate fuses as close to the source as possible.
3. Replace fuse with the same type and rating to provide protection against risk of fire and shock hazards.
4. In the event of repeated failure, do **NOT** replace the fuse again as repeated failure indicates a defective condition that will **NOT** clear by replacing the fuse.
5. Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate, or service this equipment.
6. Read and understand this manual and other applicable manuals in their entirety before proceeding. Failure to observe this precaution could result in severe bodily injury or loss of life.
7. **WARNING:** Battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire.
8. **WARNING:** EXPLOSION HAZARD - Batteries must only be changed in an area known to be non-hazardous.
9. **WARNING:** Do not disconnect while circuit is live unless area is known to be non-hazardous.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Precautions

All applicable codes and standards need to be followed in the installation of this product. Adhere to the following safety precautions whenever any type of connection is made to the module:

1. Connect the safety (earth) ground on the power connector first before making any other connections.
2. When connecting to the electric circuits or pulse-initiating equipment, open their related breakers.
3. Do NOT make connection to live power lines.
4. Make connections to the module first; then connect to the circuit to be monitored.
5. Route power wires in a safe manner in accordance with good practice and local codes.
6. Wear proper personal protective equipment including safety glasses and insulated gloves when making connections to power circuits.
7. Ensure hands, shoes, and floor are dry before making any connection to a power line.
8. Make sure the unit is turned OFF before making connections to terminals.
9. Make sure all circuits are de-energized before making connections.
10. Before each use, inspect all cables for breaks or cracks in the insulation. Replace immediately if defective.
11. Use copper conductors in field wiring only, 60/75°C.
12. Use caution when connecting controllers to PCs via serial or USB. PCs, especially laptops, may use “floating power supplies” that are ungrounded. This could cause a damaging voltage potential between the laptop and controller. Ensure the controller and laptop are grounded for maximum protection. Consider using a USB isolator due to voltage potential differences as a preventative measure.



Technical Support

| North America | Europe |
|--|--|
| 1 (317) 916-4274 1 (877) 665-5666 www.hornerautomation.com APGUSATechSupport@heapg.com | +353 (21) 4321-266 www.hornerautomation.eu technical.support@horner-apg.com |