



General Specifications	
Required Power (Steady State)	<130mA @ 5V and <26mA @ 24V
Digital Outputs	16
Relative Humidity	5-95% non-condensing
Port Connectors	Phoenix Contact 2202234
Port Wiring - Digital I/O	16-24 AWG / 0.2-1.5mm ²
Operating Air Temp	-40°C (-40°F) to 60°C (140°F)
Storage Temp	-40°C (-40°F) to 85°C (185°F)
Weight	3.10 oz.
Dimensions	76.5mm x 124.5mm x 19mm; 3" x 4.9" x 0.75"
Certifications (UL/CE)	North America: https://hornerautomation.com/certifications/ Europe: https://www.hornerautomation.eu/support/certifications-2

1.2 Digital Outputs	
Outputs per Module	16
Commons per Module	1
Operating Voltage	10-30VDC
Output Type	Sourcing/10kΩ pull down
Peak Voltage	35VDC
Max. Load Current per Output	0.5A
Max. Load Current per Common	4A
OFF to ON Response	Max. 1ms
ON to OFF Response	Max. 1ms
Output Characteristics	Current Sourcing
Output Protection	Short Circuit

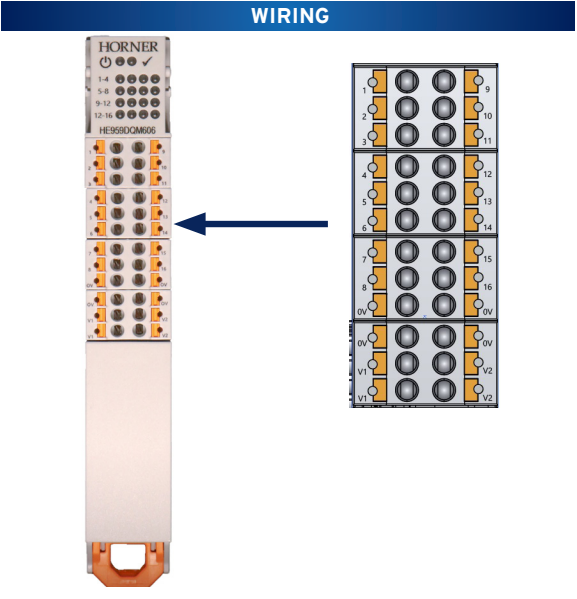


Use 75°C copper conductors only.

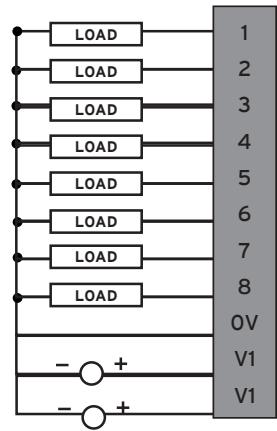

OUTPUTS 1-8	
SIGNAL	DESCRIPTION
1	Output 1
2	Output 2
3	Output 3
4	Output 4
5	Output 5
6	Output 6
7	Output 7
8	Output 8
0V	Common
0V	Common
V1	V+ Input for Outputs 1-8
V1	V+ Input for Outputs 1-8

OUTPUTS 9-16	
SIGNAL	DESCRIPTION
9	Output 9
10	Output 10
11	Output 11
12	Output 12
13	Output 13
14	Output 14
15	Output 15
16	Output 16
0V	Common
0V	Common
V2	V+ Input for Outputs 9-16
V2	V+ Input for Outputs 9-16

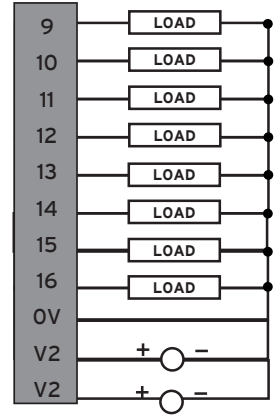



WARNINGS



WARNING - If the equipment is used in a manner not specified by Horner APG, the protection provided by the equipment may be impaired.

WARNING - EXPLOSION HAZARD - Do not disconnect equipment unless power has been removed or the area is known to be non-hazardous
AVERTISSEMENT - RISQUE D'EXPLOSION - Ne débranchez pas l'équipement tant que l'alimentation n'a pas été coupée ou que la zone n'est pas dangereuse.

WARNING - EXPLOSION HAZARD - Substitution of any component may impair suitability for Class I, Division 2
AVERTISSEMENT - RISQUE D'EXPLOSION - Le remplacement de tout composant peut nuire à la compatibilité avec la classe I, division 2

WARNING - POSSIBLE EQUIPMENT DAMAGE - Remove power from the I/O Base and any peripheral equipment connected to this local system before adding or replacing this or any module.
AVERTISSEMENT - DOMMAGES POSSIBLES À L'ÉQUIPEMENT - Coupez l'alimentation de la base d'E / S et de tout équipement périphérique connecté à ce système local avant d'ajouter ou de remplacer ce module ou tout autre module.

WARNING - Outputs should be connected to the same voltage levels (all connect to 24V supply sources)
WARNING - Digital Outputs are non-isolated and considered hazardous live.
WARNING - Loads for outputs require a Class 2 or Limited Power Source from a UL Listed power supply.

SAFETY

- All applicable codes and standards should be followed in the installation of this product.
- Shielded, twisted-pair wiring should be used for best performance.
- Shields should be grounded at one end only, preferably at the end providing the best noise shunting.

TECHNICAL SUPPORT

For further details, please refer to the Datasheets on the Horner website.

For assistance, contact Technical Support at the following locations:

North America
+1 (317) 916-4274
www.hornerautomation.com
APGUSATechSupport@heapg.com

Europe
+353 (21) 4321-266
www.hornerautomation.eu
technical.support@horner-apg.com

INSTALLATION

The HE959DQM606 is compact and mounts on a DIN-rail. Each I/O module installed adds width in increments of 19mm.

NOTE: The distance between wiring duct and surrounding modules should be at least 50mm apart.

OCS-I/O modules can be added after the OCS-I/O base has been installed on the DIN-rail and can be hot swapped with power applied. I/O scanning will stop until the correct modules for the system are detected in all slots.

I/O modules are physically added with the following procedure:

- Connect the bus connectors together to form a backplane that can accept up to 8 modules including the CNX116 or another base.
- Snap the bus connectors into the DIN rail. The DIN rail should be 35 mm x 7.5 mm and made to EN 60715 standards.
- Place the OCS-I/O base to the leftmost connector
- Inset modules by latching at the top of the DIN rail first and rocking down until the latch at the bottom of the DIN rail engages.
- To remove a module, insert a flat blade screwdriver into the metal DIN rail latch at the bottom of the module. Pry down to release the latch, the rock the module up and off the DIN Rail. Modules may be removed while powered however I/O scanning on the remaining modules will stop and I/O will go to the default state until a new module is inserted and all modules in the configuration are present.

HORNER
AUTOMATION GROUP



OCS-I/O

Digital Output Module - HE959DQM606



MAN1430 R01
22 DEC 2023